
Information Technology— SCSI-3 Media Changer Commands - 2 (SMC-2)

This is a draft proposed American National Standard of Accredited Standards Committee INCITS. As such this is not a completed standard. The T10 Technical Committee may modify this document as a result of comments received during the public review process and the approval of this document as a standard. Use of the information contained herein is at your own risk.

Permission is granted to members of INCITS and ISO, their technical committees, and their associated task groups to reproduce this document for the purposes of INCITS and ISO standardization activities without further permission, provided this notice is included. All other rights are reserved. Any commercial or for-profit use is strictly prohibited.

SMC Technical Editor:

Erich Oetting
Storage Technology Corporation
One StorageTek Drive
Louisville, CO, 80028-4272

Telephone: (303) 673-2178

Email: erich_oetting@storagetek.com

Points of Contact:

T10 Chair

John B. Lohmeyer
LSI Logic
4420 Arrows West Drive
Colorado Springs, CO 80907-3444

Tel: (719) 533-7560
Fax: (719) 533-7183
Email: lohmeyer@t10.org

T10 Vice-Chair

George Penokie
Tivoli Systems, Inc.
3605 Highway 52 N
MS 2C6
Rochester, MN 55901

Tel: (507) 253-5208
Fax: (507) 253-2880
Email: gop@us.ibm.com

INCITS Secretariat

INCITS Secretariat
1250 Eye Street, NW Suite 200
Washington, DC 20005

Telephone: (202) 737-8888
Facsimile: (202) 638-4922
Email: incits@itic.org

INCITS Web page

<http://www.incits.org/>

ANSI Web page

<http://www.ansi.org/>

T10 Electronic Information

Internet address for subscription to the T10 reflector:
Internet address for distribution via T10 reflector:
T10 Web page:

majordomo@t10.org
t10@t10.org
<http://www.t10.org/>

Document Distribution

INCITS Online Store
Managed by Techstreet
1327 Jones Drive
Ann Arbor, MI 48105

<http://www.techstreet.com/incits.html>
Telephone: (734) 302-7801 or
(800) 699-9277
Facsimile: (734) 302-7811

or

Global Engineering
15 Inverness Way East
Englewood, CO 80112-5704

<http://global.ihs.com/>
Telephone: (303) 792-2181 or
(800) 854-7179
Facsimile: (303) 792-2192

Revision History

Rev 5

Added support for All Registrants Persistent Reservations (02-130r0).
Device Identifier fields may be padded (02-104r3).

Rev 4

Removed references to CAM.
Removed references to SCSI-2.
Added log pages defined in SPC-2 to table 36.
Added mode pages defined in SPC-2 to table 37.
New text referencing TapeAlert page in SSC and flags defined here.
Added flag values for library devices from TapeAlert 3.0 as appendix A.
Other minor editorial changes.

Rev 3

Added Initialize Element Status with Range command. (01-308R2)
Correct table and clause references in text.
Update information on other SCSI standards.
Update Points of Contact.
Changed NCITS to INCITS

Rev 2

Fix reservation restrictions for READ ELEMENT STATUS commands.

Rev 1

Add connected media changer bit (01-211r0).
Add Read Attribute and Write Attribute commands (99-148r7)
Add table of reservation restrictions from SPC-2 annex B.
Revised contact information.

Rev 0

First revision of SMC-2 includes the following changes from NCITS 314-1999:
Corrected opcodes of Release Element (6) and Release Element (10) commands.
Deleted obsolete Rezero Unit command.
Added Log Sense, Log Select and Report Luns to command list.
Restored Third Party ID field in Table 24, Reserve Element (10) command.
Changed SMC to SMC-2 and updated project number.
Changed name to Media Changer instead of Medium Changer.
Added TapeAlert page to table of log page codes.
Update points of contact.

ANSI
INCITS XXX-200x

American National Standard
for Information Technology —

SCSI-3 Media Changer Commands - 2 (SMC-2)

Secretariat
Information Technology Industry Council

Approved mm dd yy
American National Standards Institute, Inc.

ABSTRACT

This standard defines the SCSI commands and model for independent media changer devices and attached media changer functions integrated into other SCSI devices.

American National Standard

Approval of an American National Standard requires verification by ANSI that the requirements for due process, consensus, and other criteria for approval have been met by the standards developer. Consensus is established when, in the judgment of the ANSI Board of Standards Review, substantial agreement has been reached by directly and materially affected interests. Substantial agreement means much more than a simple majority, but not necessarily unanimity. Consensus requires that all views and objections be considered, and that effort be made towards their resolution.

The use of American National Standards is completely voluntary; their existence does not in any respect preclude anyone, whether he has approved the standards or not, from manufacturing, marketing, purchasing, or using products, processes, or procedures not conforming to the standards.

The American National Standards Institute does not develop standards and will in no circumstances give interpretation on any American National Standard. Moreover, no person shall have the right or authority to issue an interpretation of an American National Standard in the name of the American National Standards Institute. Requests for interpretations should be addressed to the secretariat or sponsor whose name appears on the title page of this standard.

CAUTION NOTICE: This American National Standard may be revised or withdrawn at any time. The procedures of the American National Standards Institute require that action be taken periodically to reaffirm, revise, or withdraw this standard. Purchasers of American National Standards may receive current information on all standards by calling or writing the American National Standards Institute.

CAUTION: The developers of this standard have requested that holders of patents that may be required for the implementation of the standard, disclose such patents to the publisher. However, neither the developers nor the publisher have undertaken a patent search in order to identify which, if any, patents may apply to this standard.

As of the date of publication of this standard and following calls for the identification of patents that may be required for the implementation of the standard, no such claims have been made. No further patent search is conducted by the developer or the publisher in respect to any standard it processes. No representation is made or implied that licenses are not required to avoid infringement in the use of this standard.

Foreword

The SCSI-3 Media Changer Commands - 2 (SMC-2) standard specifies the commands and external behavioral characteristics of a device server that declares itself a medium changer in the device type field of the INQUIRY command response data. This standard also specifies the behavior of the attached media changer commands available when the MCHNGR bit is set to one in INQUIRY command response data.

SMC -2 is specified independent of any service delivery subsystem used to carry commands, command parameter data, command response data and status. The SMC-2 standard conforms to the requirements specified in the SCSI-3 Architecture Model (SAM) standard.

With any technical document there may arise questions of interpretation as new products are implemented. The INCITS committee has established procedures to issue technical opinions concerning the standards developed by the INCITS organization. These procedures may result in SCSI Technical Information Bulletins being published by INCITS.

These bulletins, while reflecting the opinion of the Technical Committee which developed the standard, are intended solely as supplementary information to users of the standard. This standard, ANSI INCITS.xxx-200x, as approved through the publication and voting procedures of the American National Standards Institute, is not altered by these bulletins. Any subsequent revision to this standard may or may not reflect the contents of these Technical Information Bulletins.

Current INCITS practice is to make Technical Information Bulletins available through:

Global Engineering
15 Inverness Way East
Englewood, CO 80112-5704

Telephone: (303) 792-2181 or
(800) 854-7179

Facsimile: (303) 792-2192

Introduction

The SCSI-3 Media Changer Command Set (SMC-2) standard is divided into seven clauses:

- Clause 1 is the scope.
- Clause 2 enumerates the normative and informative references that apply to this standard
- Clause 3 describes definitions, symbols, abbreviations and conventions used in this standard.
- Clause 4 is an overview of this standard.
- Clause 5 describes the model for this device class.
- Clause 6 describes the commands and responses.
- Clause 7 describes the parameters.
- Annex A defines flags used by the TapeAlert mode page.
- Annex B is the bibliography.

Contents

1 Scope	12
2 Normative References	14
3 Definitions, symbols and abbreviations	15
3.1 Definitions	15
3.2 Symbols and abbreviations	18
3.3 Keywords	18
3.4 Conventions	19
4 Overview	20
5 Media changer models	22
5.1 Independent media changer	22
5.2 Attached media changer	22
5.3 Media changer elements	22
5.4 Medium transport element	23
5.5 Storage element	24
5.6 Import/export element	24
5.7 Data transfer element	24
5.8 Element status maintenance requirements	25
5.9 Volume tag information	25
5.10 Primary and alternate volume tag information	26
5.11 Volume tag information format	26
6 Commands for media changer logical units	27
6.1 Summary of commands for independent media changers	27
6.2 Summary of commands for attached media changers	28
6.3 Commands allowed in the presence of various reservations	29
6.4 EXCHANGE MEDIUM command	31
6.5 INITIALIZE ELEMENT STATUS command	33
6.6 INITIALIZE ELEMENT STATUS WITH RANGE command	34
6.7 MOVE MEDIUM command	35
6.8 POSITION TO ELEMENT command	37
6.9 READ ATTRIBUTE command	38
6.10 READ ELEMENT STATUS command	40
6.10.1 Element status data	42
6.10.2 Element status page	43
6.10.3 Medium transport element descriptor	44
6.10.4 Storage element descriptor	46
6.10.5 Import/export element descriptor	48
6.10.6 Data transfer element descriptor	50
6.10.7 Identification descriptor	52
6.11 RELEASE ELEMENT (6) command	53
6.11.1 Logical unit release (Mandatory)	53
6.11.2 Element release (Optional)	53

6.12 RELEASE ELEMENT (10) command	54
6.12.1 Third-party release (Mandatory)	54
6.13 REQUEST VOLUME ELEMENT ADDRESS command	55
6.14 RESERVE ELEMENT (6) command	58
6.14.1 Logical unit reservation (Mandatory)	58
6.14.2 Element reservation (optional)	59
6.15 RESERVE ELEMENT (10) command	60
6.15.1 Third-party reservation (Mandatory)	61
6.15.2 Superseding reservations	62
6.16 SEND VOLUME TAG command	63
6.17 WRITE ATTRIBUTE command.	67
7 Parameters	68
7.1 Diagnostic parameters	68
7.2 Log parameters	68
7.2.1 Log page codes for independent media changers.	68
7.2.2 TapeAlert page	69
7.3 Mode parameters	70
7.3.1 Device capabilities mode page	72
7.3.2 Element address assignment mode page	74
7.3.3 Transport geometry parameters mode page	75

Figures

Figure 1 — General structure of SCSI standards	12
Figure 2 — Example independent media changer device.	21

Tables

Table 1 — Volume tag information format	26
Table 2 — Commands for independent media changers	27
Table 3 — Commands for attached media changers	28
Table 4— SMC commands allowed in the presence of various reservations	30
Table 5— EXCHANGE MEDIUM command	31
Table 6 — INITIALIZE ELEMENT STATUS command	33
Table 7 — INITIALIZE ELEMENT STATUS WITH RANGE command	34
Table 8 — MOVE MEDIUM command	35
Table 9 — POSITION TO ELEMENT command	37
Table 10— READ ATTRIBUTE command	38
Table 11 —READ ATTRIBUTE service action codes	39
Table 12 — Parameter data for ELEMENT LIST service action	39
Table 13 — READ ELEMENT STATUS command	40
Table 14 —Element type code	41
Table 15 — Element status data	42
Table 16 —Element status page	43
Table 17 —Medium transport element descriptor	44
Table 18 — Storage element descriptor	46
Table 19 — Import/export element descriptor	48
Table 20 —Data transfer element descriptor	50
Table 21 — Identification descriptor fields	52
Table 22 — RELEASE ELEMENT (6) command	53
Table 23 — RELEASE ELEMENT (10) command	54

Table 24 — RELEASE ELEMENT (10) parameter list	55
Table 25 — REQUEST VOLUME ELEMENT ADDRESS command	56
Table 26 — Volume element address header	57
Table 27 — RESERVE ELEMENT (6) command	58
Table 28 — Data format of element list descriptors	60
Table 29 — RESERVE ELEMENT (10) command	61
Table 30 — RESERVE ELEMENT (10) ID & elements parameter list	62
Table 31 — SEND VOLUME TAG command	63
Table 32 — Send action codes	64
Table 33 — Send volume tag parameters format	65
Table 34 — WRITE ATTRIBUTE command	67
Table 35 — Diagnostic page codes	68
Table 36 — Log page codes	69
Table 37 — Mode page codes	71
Table 38 — Device capabilities page	72
Table 39 — Element address assignment page	74
Table 40 — Transport geometry parameters page	76
Table 41 — Transport geometry descriptor	76

Annexes

TapeAlert Flags for independent media changers	77
Bibliography	82

**American National Standard for
Information Technology -
SCSI-3 Media Changer Commands - 2 (SMC-2)**

1 Scope

This standard defines the command set extensions for operation of SCSI media changer devices, and command set extensions that allow media changer functions in other types of SCSI devices.

The objectives of the SCSI-3 Media Changer Commands - 2 standard are:

- To permit an application client to communicate with a logical unit that declares itself to be a medium changer device in the DEVICE TYPE field of the INQUIRY command response data over a SCSI service delivery subsystem.
- To permit an application client to access the media changer functions in a logical unit that sets the MCHNGR bit in INQUIRY command response data.
- To define commands to manage the operation of SCSI media changer devices.

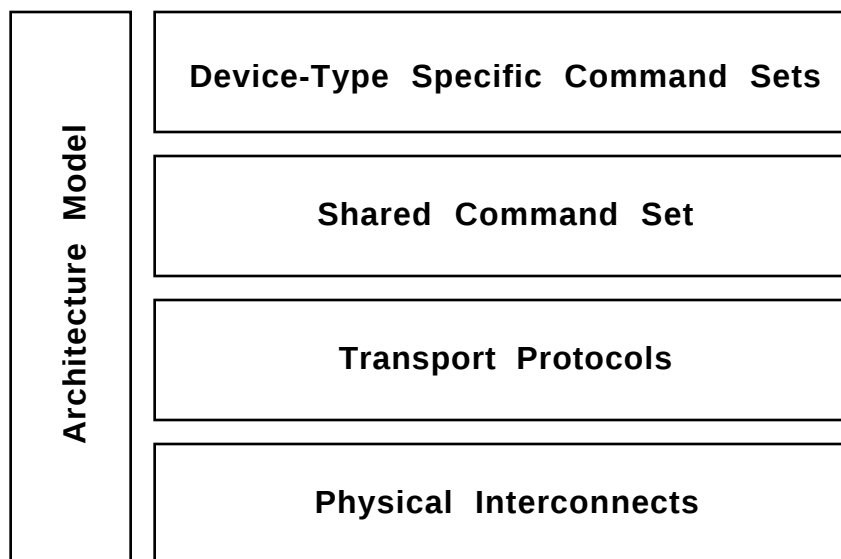


Figure 1 — General structure of SCSI standards

Figure 1 is intended to show the general structure of SCSI-3 standards. The figure is not intended to imply a relationship such as a hierarchy, protocol stack, or system architecture.

At the time this standard was generated examples of the SCSI-3 general structure included:

Physical Interconnects:

- Fibre Channel Arbitrated Loop [NCITS T11/960D]
- Fibre Channel – Physical and Signaling Interface [X3.230-1994/AM1-1996]
- High Performance Serial Bus [ANSI/IEEE 1394–1995]
- SCSI-3 Fast-20 Parallel Interface [X3.277-1996]
- SCSI Parallel Interface – 2 [X3.302-1999]
- Serial Storage Architecture Physical Layer 1 [X3.293-1996]
- Serial Storage Architecture Physical Layer 2 [NCITS.307]

Transport Protocols:

- SCSI-3 Interlocked Protocol [X3.292-1997]
- Serial Storage Architecture Transport Layer 1 [X3.295-1996]
- SCSI-3 Fibre Channel Protocol [X3.269-1996]
- SCSI-3 Fibre Channel Protocol - 2 [NCITS T10/1144D]
- SCSI Serial Bus Protocol – 2 [NCITS T10/1155D]
- Serial Storage Architecture SCSI-3 Protocol [NCITS.309]
- Serial Storage Architecture Transport Layer 2 [NCITS.308]

Shared Command Set:

- SCSI-3 Primary Commands [X3.301-1997]
- SCSI Primary Commands-2 [NCITS T10/1236D]

Device-Type Specific Command Sets:

- SCSI-3 Block Commands [NCITS.306-1998]
- SCSI-3 Block Commands - 2 [NCITS T10/1417D]
- SCSI-3 Reduced Block Commands [NCITS.330-2000]
- SCSI-3 Enclosure Services [NCITS.305-1998]
- SCSI-3 Stream Commands [NCITS.335-2000]
- SCSI-3 Stream Commands - 2 [NCITS/T10 1434D]
- SCSI-3 Media Changer Commands - 2 (this standard)
- SCSI-3 Controller Commands - 2 [NCITS .318-1998]
- SCSI-3 Multimedia Command Set [X3.304-1997]
- SCSI-3 Multimedia Command Set – 2 [NCITS.333-2000]

Architecture Model:

- SCSI-3 Architecture Model [X3.270-1996 R2001]
- SCSI-3 Architecture Model - 2 [NCITS T10/1157D]

The term SCSI is used wherever it is not necessary to distinguish between the versions of SCSI.

2 Normative References

The following standards contain provisions that, through reference in the text, constitute provisions of this standard. At the time of publication, the editions indicated were valid. All standards are subject to revision, and parties to agreements based on this standard are encouraged to investigate the possibility of applying the most recent editions of the standards listed below.

Copies of the following documents can be obtained from ANSI: Approved ANSI standards, approved and draft international and regional standards (ISO, IEC, CEN/CENELEC, ITUT), and approved standards of other countries (including BSI, JIS, and DIN). For further information, contact ANSI Customer Service Department at 212-642-4900 (telephone), 212-302-1286 (fax) or via the World Wide Web at <http://www.ansi.org>.

ANSI X3.270-1996, *Information Technology – SCSI-3 Architecture Model*
ANSI X3.301-1997, *Information Technology – SCSI-3 Primary Commands*

3 Definitions, symbols and abbreviations

3.1 Definitions

This clause contains a glossary of special terms used in this standard. These terms apply to SMC-2 and do not constitute a comprehensive glossary for SCSI-3.

3.1.1 additional sense code: The value in the ADDITIONAL SENSE CODE and ADDITIONAL SENSE CODE QUALIFIER fields of REQUEST SENSE command response data (see SPC).

3.1.2 application client: An object that is the source of SCSI commands. Further definition of an application client may be found in the SCSI-3 Architecture Model (SAM).

3.1.3 attached media changer: A media changer that accepts commands issued to the same logical unit as a primary SCSI device that is not a media changer.

3.1.4 autosense data: The sense data that is automatically delivered to the application client by the device server in a protocol-specific manner when a command completes with a CHECK CONDITION status (see SAM).

3.1.5 byte: Indicates an 8-bit construct.

3.1.6 command: A request describing a unit of work to be performed by a device server. A detailed definition of a command may be found in SAM.

3.1.7 command descriptor block: The structure up to 16 bytes in length used to communicate commands from an application client to a device server.

3.1.8 data transfer element: A component of a media changer used to access the data stored on a volume. The address in media changer element space of a primary device.

3.1.9 device service request: A request, submitted by an application client, conveying a SCSI command to a device server. A detailed definition of a device service request may be found in SAM.

3.1.10 device type: The type of device (or device model) implemented by the device server.

3.1.11 element: An addressable physical component of a media changer device that can serve as the location of a removable unit of data storage medium.

3.1.12 extent: An extent is a specified number of logical blocks, typically identified by a starting logical block address and a count of the number of blocks in the extent.

3.1.13 field: A group of one or more contiguous bits.

3.1.14 hard reset: A target response to a reset event or TARGET RESET task management function. A detailed definition of hard reset may be found in SAM.

3.1.15 host: A device with the characteristics of a primary computing device, typically a personal computer, workstation, minicomputer, mainframe computer, or auxiliary computing device or server. A host includes application clients, one or more initiators, and may in some cases take on a target role.

3.1.16 import/export element: A location within a media changer device that can be accessed by both the medium transport elements and by the operator or an external device.

3.1.17 independent media changer: A media changer addressed as a separate SCSI device or logical unit.

3.1.18 initiator: A SCSI device containing application clients that originate device service requests to be processed in a device server. A detailed definition of an initiator may be found in SAM.

3.1.19 linked command: One in a series of SCSI commands executed by a single task, which collectively make up a discrete I/O operation. A detailed definition of a linked command may be found in SAM.

3.1.20 logical unit: An externally addressable entity within a target that implements a SCSI device model and contains a device server. A detailed definition of a logical unit may be found in SAM.

3.1.21 logical unit number: An encoded 64-bit identifier for a logical unit. A detailed definition of a logical unit number may be found in SAM.

3.1.22 medium: One unit of media, equivalent to volume as defined in this standard.

3.1.23 media changer: A media changer mechanizes the movement of media to and from the device that records on or reads from the media.

3.1.24 medium transport element: A component of a media changer device that is used to move volumes.

3.1.25 one: Value of 1, the logical true condition of a variable.

3.1.26 page: Several commands use regular parameter structures that are referred to as pages. These pages are identified with a value known as a page code.

3.1.27 port: A port is a portion of the service delivery interface of a SCSI-3 device. A SCSI-3 device may have more than one port. Each port may attach to the same or a different physical interface.

3.1.28 primary device: A device for reading or writing data on medium. Examples are magnetic disk drives, cartridge tape drives, optical disk drives and CD-ROM drives. Use in a media changer environment implies that the device supports removable volumes.

3.1.29 protocol-specific: Requirements for the referenced item are defined by a SCSI-3 protocol standard. A detailed definition of protocol-specific may be found in SAM.

3.1.20 SCSI device: A device that is connected to a service delivery subsystem and supports a SCSI application protocol. A detailed definition of a SCSI device may be found in SAM.

3.1.31 SCSI domain: The interconnection of two or more SCSI devices and a service delivery subsystem forms a SCSI domain. A detailed definition of a SCSI domain may be found in SAM.

3.1.32 sense data: Data describing an error or device exception condition that a device server delivers to an application client (see SPC). Sense data may be delivered in response to a REQUEST SENSE command or as autosense data.

3.1.33 sense key: Contents of the SENSE KEY field of REQUEST SENSE command response data.

3.1.34 service delivery subsystem: That part of a SCSI I/O system that transmits service requests to a logical unit and returns logical unit responses to an initiator. A detailed definition of a service delivery subsystem may be found in SAM.

3.1.35 status: One byte of response information sent from a device server to an application client upon completion of each command. A detailed definition of status may be found in SAM.

3.1.36 storage element: A component of a media changer device used only for physical storage of a volume.

3.1.37 system: A system is one or more SCSI domains operating as a single configuration.

3.1.38 target: A SCSI device containing one or more logical units that receive and execute commands from an initiator. A detailed definition of a target may be found in SAM.

3.1.39 task: An object within a logical unit that represents the work associated with a command or a group of linked commands. A detailed definition of a task may be found in SAM.

3.1.40 task set: A group of tasks within a logical unit, whose interaction is dependent on the queuing and autocontingent allegiance rules defined in SAM.

3.1.41 third-party: When used in reference to RESERVE or RELEASE commands, third-party means a reservation made on behalf of another device (e.g., a processor device requests that a direct-access device reserve itself for use by a sequential-access device).

3.1.42 unit attention condition: A state that a logical unit maintains while it has asynchronous status information to report to one or more initiators. A detailed definition of the unit attention condition may be found in SAM.

3.1.43 vendor-specific: Something (e.g., a bit, field, code value, etc.) that is not defined by this standard and may be vendor defined.

3.1.44 volume: The recording media and its carrier that is removable from a primary device and may be moved from one element to another by a media changer.

3.1.45 volume rotation: The process of changing the orientation of a volume. In particular this refers to inverting a two-sided volume cartridge so that a data transport element that accesses only one side at a time may access data on the other side.

3.1.46 zero: Value of 0, the logical false condition of a variable.

3.2 Symbols and abbreviations

- **CDB** command descriptor block
- **I/O** input/output
- **ID** identifier
- **LSB** least significant bit
- **LUN** logical unit number
- **MSB** most significant bit
- **MMC** SCSI-3 Multi-Media Commands standard
- **RSVD** reserved field or bit
- **SAM** SCSI-3 Architecture Model
- **SBC** SCSI-3 Block Commands standard
- **SCSI-3** Only standards identified in the foreword as being part of the SCSI-3 standard document set
- **SMC-2** SCSI-3 Media Changer Commands - 2 standard
- **SPC** SCSI-3 Primary Commands standard
- **SSC** SCSI-3 Stream Commands standard

3.3 Keywords

3.3.1 expected: A keyword used to describe the behavior of the hardware or software in the design models assumed by this standard. Other hardware and software design models may also be implemented.

3.3.2 invalid: A keyword used to describe an illegal or unsupported bit, byte, word, field or code value. Receipt of an invalid bit, byte, word, field or code value shall be reported as error.

3.3.3 mandatory: A keyword indicating an item that is required to be implemented as defined in this standard.

3.3.4 may: A keyword that indicates flexibility of choice with no implied preference.

3.3.5 obsolete: A keyword indicating that an item was defined in prior SCSI standards but has been removed from this standard.

3.3.6 optional: A keyword that describes features that are not required to be implemented by this standard. However, if any optional feature defined by this standards is implemented, then it shall be implemented as defined in this standard.

3.3.7 reserved: A keyword referring to bits, bytes, words, fields and code values that are set aside for future standardization. A reserved bit, byte, word or field shall be set to zero, or in accordance with a future extension to this standard. Recipients may check reserved bits, bytes, words or fields for zero values and report errors if non-zero values are received. Receipt of reserved code values in defined fields shall be reported as error.

3.3.8 shall: A keyword indicating a mandatory requirement. Designers are required to implement all such mandatory requirements to ensure interoperability with other products that conform to this standard.

3.3.9 should: A keyword indicating flexibility of choice with a strongly preferred alternative; equivalent to the phrase "it is strongly recommended".

3.4 Conventions

Certain words and terms used in this standard have a specific meaning beyond the normal English meaning. These words and terms are defined either in 3.1 or in the text where they first appear. Names of commands, statuses, sense keys, additional sense codes, and additional sense code qualifiers are in all uppercase (e.g., REQUEST SENSE). Field names and bit names are in SMALL CAPS. Lower case is used for words having the normal English meaning.

Fields containing only one bit are usually referred to as the name bit instead of the name field.

Numbers that are not immediately followed by lowercase b or h are decimal values.

Numbers immediately followed by lowercase b (xxb) are binary values.

Numbers or upper case letters immediately followed by lowercase h (xxh) are hexadecimal values.

Lists sequenced by letters (e.g., a-red, b-blue, c-green) show no priority relationship between the listed items. Numbered lists (e.g., 1-red, 2-blue, 3-green) show a priority ordering between the listed items. If a conflict arises between text, tables, or figures, the order of precedence to resolve the conflicts is text; then tables; and finally figures. Not all tables or figures are fully described in the text. Tables show data format and values. NOTES do not constitute any requirements for implementors.

4 Overview

The SCSI-3 media changer device class specifies a logical unit that is involved, primarily, with the movement of removable volumes in a controlled environment without human intervention. The SCSI-3 device classes that provide for removable volumes are block, multi-media and sequential. (See the SBC, MMC and SSC standards.)

A media changer logical unit receives commands to move volumes between various element types in the element address space of the media changer. The element types are storage, data transfer, medium transport, and import/export. A volume handling robotic subsystem, addressed as a medium transport element, moves volumes within a media changer.

A media changer logical unit maintains an inventory of volumes and the element address they can be found. The media changer logical unit reports this inventory when requested as well as identifying the element addresses assigned to different types of elements.

Different levels of sophistication may be implemented in how this inventory is managed, reported, detected and maintained. The elements in a media changer may be reserved to different initiators. For example, one data transport element may be reserved for exclusive use by one initiator. The primary device, located at that data transfer element, may then be attached to various systems for their use. In some cases, the primary device associated with a data transfer element may not be a SCSI device.

The split between load and unload control of the medium and read and write control by a primary device is a key feature of this device class. The mechanism for coordinating this kind of sophisticated activity is not specified in this standard. The media changer device class provides the means for mount/dismount management only.

Figure 2 shows an example of an independent media changer. The data transfer elements (primary devices) shown may be any type of removable media device such as a tape drive, disk drive or optical drive. Supporting multiple types of removable media within the same media changer is also permitted. Also, the ports on each primary device may or may not attach to the same service delivery subsystem and the interfaces to the primary devices may or may not be SCSI. The number and arrangement of elements is arbitrary.

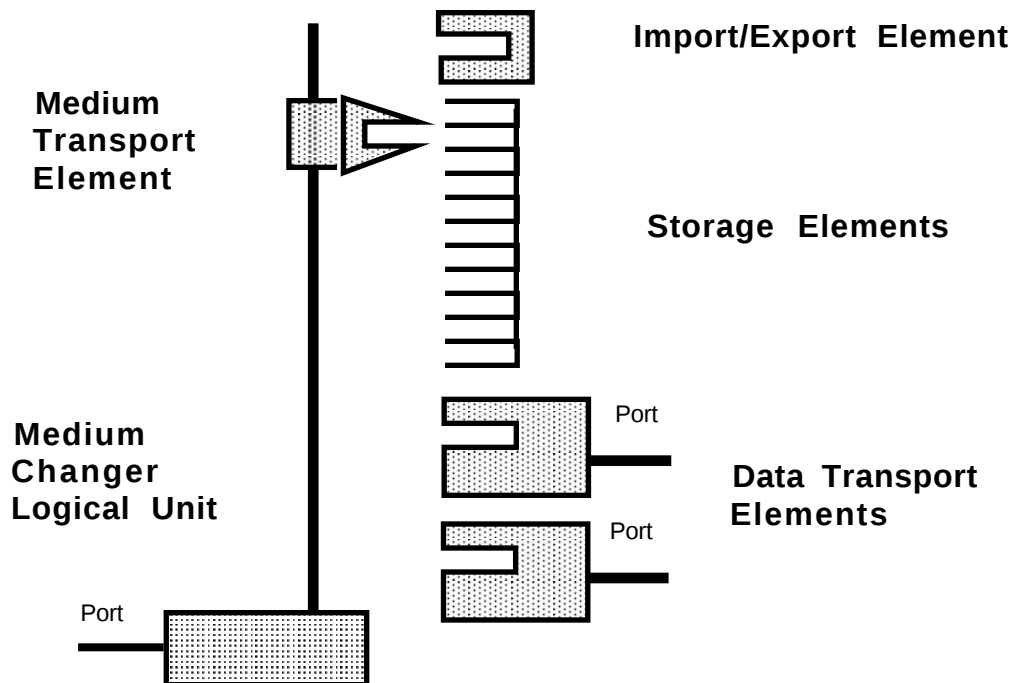


Figure 2 — Example independent media changer device.

The independent changer model applies to implementations where the media changer is addressed as a separate logical unit. The logical unit for the media changer may be accessed via the same SCSI ID as the primary device, or via a different SCSI ID. This type of media changer may support more than one primary device.

The attached media changer model permits a subset of the functions of an independent changer to be incorporated directly into a primary device. Only one data transport element is permitted. In this case, only one logical unit is used to access all functions.

A media changer moves volumes among the several element types accessible to it on command from an initiator. Media changers shall be capable of reporting the full or empty status of any element address in its domain.

5 Media changer models

5.1 Independent media changer

An independent mediachanger is a device server that returns 8h in the PERIPHERAL DEVICE TYPE field (see SPC) of INQUIRY command response data.

Independent media changers for the SMC-2 standard respond to a LUN different from those used by a primary device. Communication with a primary device may use the same service delivery subsystem as the media changer device, or a different SCSI service delivery subsystem. Primary devices that are not SCSI devices are also permitted. Multiple primary devices may be attached to an independent changer.

If a primary device served by the media changer is a SCSI device, the primary device may be addressed on a SCSI-3 service delivery subsystem though the same port as the media changer but with a different LUN or the primary device may be addressed through independent ports and any LUN on the same or a different service delivery subsystem.

The READ ELEMENT STATUS command response data page for each data transfer element may provide the identity of the primary device serviced by a media changer device. This support is optional since a primary device is not required to be a SCSI-3 device.

5.2 Attached media changer

An attached media changer is part of a device server that sets the MCHNGR bit to one in its standard INQUIRY data (see SPC). Attached media changers respond to the same LUN as a primary device that is not a media changer. In an attached media changer, the PERIPHERAL DEVICE TYPE field of INQUIRY command response data returns the type of the primary device.

Two media changer commands, READ ELEMENT STATUS ATTACHED and MOVE MEDIUM ATTACHED are added to the command set of the primary device. The other commands available depend on the model for the primary device.

5.3 Media changer elements

A media changer has an address space separate and distinct from the physical address space of a SCSI-3 service delivery subsystem. The term element is used throughout this standard to refer to one member of the media changer address space. Within a media changer, the element addresses are a set of physical locations and mechanisms within the scope of a media changer device.

Each element is an instance of one of four element types:

- Medium Transport Element
- Storage Element
- Import/Export Element
- Data Transfer Element

Each element is a discrete physical entity with a unique element address that may provide storage for zero or one volume. A volume is in exactly one element at a time. The point in time during movement when a volume is considered in a different element is implementation dependent. When requested to

report element status, a volume shall be reported as being at exactly one element address. The element address shall not be arbitrarily changed by the media changer. However, multiple initiator environments may cause volumes to be moved without notifying other initiators.

Volumes are addressed indirectly by this model. Volumes can be moved to or from any of the elements of the media changer device using element addresses. The method of detecting the presence of a volume at any element in a media changer is vendor specific.

In order to ensure exclusive access to a volume, the element where the volume is located (the element address) may be reserved by an initiator. Exclusive access will be lost if the volume is moved to an unreserved element. Exclusive access will be retained if a volume is moved between two reserved elements. Reservation of the medium transport element used is not required to preserve exclusive access. In an independent media changer, elements may be reserved by the RESERVE ELEMENT (6), RESERVE ELEMENT (10), or PERSISTENT RESERVE OUT (see SPC) commands. In an attached media changer, element reservations are only available using the PERSISTENT RESERVE OUT command.

Providing independent storage for medium is optional for medium transport, import export, and data transport elements. The capabilities of a particular media changer can be determined from mode parameters in the device capabilities page (see 7.3.1).

NOTE 1—An example of an element not providing independent storage for a volume is a carousel style storage for volumes. The import/export function could be provided by a port which allows operator access to one of the storage elements. In such a media changer a MOVE MEDIUM command to move a volume from a storage element to the import/export element rotates the carousel to align the addressed storage element to the import/export position. In this case, the import/export element does not provide independent storage but rather access to one of the storage elements.

Each element type shall be assigned a contiguous number range. The number ranges assigned to element types shall not overlap. The number ranges are not required to form one contiguous number range over all element types. Element address zero is reserved for use as the default medium transport element address.

5.4 Medium transport element

A medium transport element contains the functions of the media changer device that moves a volume from one element address to another. When a medium transport element can serve (even temporarily) as a storage location for a volume, each location where a volume may be held shall have a separate medium transport element address. Support for a medium transport element address being the source and/or destination address in a MOVE MEDIUM and EXCHANGE MEDIUM command is optional. The maximum number of medium transport elements is 127.

In larger media changer devices, the medium movement functions may be performed by multiple independent robotics subsystems. Each of these subsystems may have a number of medium transport element addresses. Sets of medium transport elements for the same common robotics system shall have their medium transport element addresses assigned contiguously.

Any of the medium transport element addresses within a media changer may be used in the medium transport element address field of any MOVE MEDIUM or EXCHANGE MEDIUM command. An initiator may determine the capabilities of the medium transport elements of a media changer in the transport geometry mode parameters.

Element address zero is reserved for use in the medium transport element address field of MOVE MEDIUM and EXCHANGE MEDIUM commands to direct the media changer to use a default, or any available medium transport element. Support for element address zero is mandatory.

Attached media changer devices shall have only one medium transport element. In an attached changer, element address zero is reserved for the medium transport element.

5.5 Storage element

Storage elements are locations of volumes while a volume is not in some other element type. A volume in a storage element is available for access by medium transport elements. If the SMC-2 device has no storage elements, then it shall have at least one import/export element with independent storage capability.

A storage element may be a source or destination address in a MOVE MEDIUM command or the optional EXCHANGE MEDIUM command.

5.6 Import/export element

Import/export elements are locations of volumes that are being inserted into or withdrawn from the media changer. A volume in one of these elements is accessible by at least one medium transport element in the media changer, by the operator, or by another media changer device (i.e., cascaded media changer devices). Support for an import/export element is optional.

Any import/export element may be capable of import actions only, export actions only, or both when present in a media changer logical unit.

An import/export element address may be a source or destination address in a MOVE MEDIUM command or the optional EXCHANGE MEDIUM command. Import/export elements may or may not provide independent storage of a volume.

5.7 Data transfer element

A data transfer element represents the interface between the media changer and a primary device (e.g., a removable media optical disk drive or tape drive). A data transfer element is considered part of the media changer and is not part of a primary device.

NOTE 2— It should be possible to place a primary device of a compatible device class in proximity to a media changer, specify the interface as a data transfer element to the media changer, and begin operation without any change to the primary device. Closer coordination between the media changer and a primary device may be required in some implementations. Such coordination is vendor-specific.

Primary devices are capable of reading or writing the medium in a volume. Data transfer elements may also be viewed as media changer element addresses of volumes loaded in or available for loading in or removal from primary devices (e.g., disk or tape drives). Any data transfer element shall be accessible to at least one medium transport element.

A data transfer element address may be a source or destination address in a MOVE MEDIUM command or the optional EXCHANGE MEDIUM command. Data transfer elements may or may not provide

independent storage of a unit of media, see the device capabilities mode parameters. Attached media changers shall have only one data transfer element.

5.8 Element status maintenance requirements

When a media changer receives a valid READ ELEMENT STATUS command with a CURDATA bit of zero, the media changer shall be capable of reporting as command response data various data required by each page type (i.e., full, error, etc.). The media changer may maintain this information at all times or it may regenerate it after receiving a valid READ ELEMENT STATUS command. The optional INITIALIZE ELEMENT STATUS and INITIALIZE ELEMENT STATUS WITH RANGE commands may be used to force regeneration of this information.

5.9 Volume tag information

The READ ELEMENT STATUS command response data descriptor format for all element types includes fields that contain volume tag information. These optional fields are used to report volume identification information that the media changer has acquired either by reading an external label (e.g., bar code labels), by a SEND VOLUME TAG command, or by other means which may be vendor-specific. The same volume tag information shall be available to all initiators whether the volume tag information was assigned by that initiator, by some other initiator, or by the media changer.

The volume tag information field values shall be independent of any volume identification information recorded on the medium or a volume.

The media changer command set definition does not impose any requirement that volume tag information be unique over the volumes within the domain of the media changer. If volume tag information is implemented, the media changer shall retain the association between volume tag information and a volume as the volume is moved from element address to element address.

Volume tag information provides a means to confirm the identity of a volume that is stored at a media changer element address. When volume tag information is implemented, this standard does not specify any direct addressing of volumes based on the values in these fields. Optional commands are defined that provide translation between volume tag information and the element addresses of zero or more volumes with matching volume tags information.

The following commands support the optional volume tag functionality:

- SEND VOLUME TAG – used either as a translation request or to associate a volume tag with the volume currently residing at an element address. This is an optional command for independent media changers;
- REQUEST VOLUME ELEMENT ADDRESS – returns the element address currently associated with the volume tag information transferred with the last SEND VOLUME TAG command. This is an optional command for independent media changers;
- READ ELEMENT STATUS – optionally reports volume tag information for all element types. Volume tag information is an optional function of a media changer.

5.10 Primary and alternate volume tag information

Element status descriptors, as optionally reported by the READ ELEMENT STATUS command, permit defining a primary volume tag and an alternate volume tag. Alternate volume tag information provides a means for a system to use different volume identification information for each partition of a volume. Primary volume tag information refers to the logical medium accessible via a MOVE MEDIUM command with the INVERT bit set to zero. Alternate volume tag information refers to the other side of the media (i.e., the side that would be accessed via a MOVE MEDIUM command with the INVERT bit set to one). Some volumes may be recorded on both sides. The INVERT bit setting permits an initiator to select the side to use when a volume is mounted.

All volumes have a primary volume tag information attribute.

5.11 Volume tag information format

Volume tag information consists of a VOLUME IDENTIFICATION field plus a VOLUME SEQUENCE NUMBER field.

Table 1 defines the fields within the primary and alternate volume tag information fields that may be present in READ ELEMENT STATUS descriptors and in the data format for the SEND VOLUME TAG command.

Table 1 — Volume tag information format

Bit	7	6	5	4	3	2	1	0
Byte								
0	VOLUME IDENTIFICATION							
31								
32	Reserved							
33								
34	VOLUME SEQUENCE NUMBER							
35								

The VOLUME IDENTIFICATION field shall consist of a left justified sequence of characters. Unused positions shall be blank (20h) filled. In order for the SEND VOLUME TAG translate with template to work, the characters '*' and '?' (2Ah and 3Fh) shall not appear in the VOLUME IDENTIFICATION field and there shall be no blanks (20h) in the significant part (non blank filled) of the VOLUME IDENTIFICATION field. If volume tag information for a particular element is undefined, the VOLUME IDENTIFICATION field shall be zero filled. The VOLUME SEQUENCE NUMBER is a 2-byte integer field. If the VOLUME SEQUENCE NUMBER is not used, this field shall be zero.

NOTE 3— For compatibility with existing volume label conventions, it is recommended that the characters in the significant non-blank portion of the VOLUME IDENTIFICATION field be restricted to the set: '0'...'9', 'A'...'Z' and '_ '.

6 Commands for media changer logical units

6.1 Summary of commands for independent media changers

The commands for independent media changers shall be as shown in table 2.

Table 2 — Commands for independent media changers

Command	Operation Code	Type	Subclause
CHANGE DEFINITION	40h	O	SPC
EXCHANGE MEDIUM	A6h	O	6.4
INITIALIZE ELEMENT STATUS	07h	O	6.5
INITIALIZE ELEMENT STATUS WITH RANGE	37h	O	6.6
INQUIRY	12h	M	SPC
LOG SELECT	4Ch	O	SPC
LOG SENSE	4Dh	O	SPC
MODE SELECT (6)	15h	O	SPC
MODE SELECT (10)	55h	O	SPC
MODE SENSE (6)	1Ah	O	SPC
MODE SENSE (10)	5Ah	O	SPC
MOVE MEDIUM	A5h	M	6.7
PERSISTENT RESERVE IN	5Eh	O	SPC
PERSISTENT RESERVE OUT	5Fh	O	SPC
POSITION TO ELEMENT	2Bh	O	6.8
PREVENT ALLOW MEDIUM REMOVAL	1Eh	O	SPC
READ ATTRIBUTE	8Ch	O	6.9
READ BUFFER	3Ch	O	SPC
READ ELEMENT STATUS	B8h	M	6.10
RECEIVE DIAGNOSTIC RESULTS	1Ch	O	SPC
RELEASE ELEMENT (6)	16h	O	6.11
RELEASE ELEMENT (10)	57h	O	6.12
REPORT LUNS	A0H	O	SPC
REQUEST VOLUME ELEMENT ADDRESS	B5h	O	6.13
REQUEST SENSE	03h	M	SPC
RESERVE ELEMENT (6)	16h	O	6.14
RESERVE ELEMENT (10)	56h	O	6.15

SEND DIAGNOSTIC	1Dh	M	SPC
SEND VOLUME TAG	B6h	O	6.16
TEST UNIT READY	00h	M	SPC
WRITE ATTRIBUTE	8Dh	O	6.17
WRITE BUFFER	3Bh	O	SPC
Key: M = command implementation is mandatory. O = command implementation is optional. * = optional operation codes for use by sequential devices only.			

Operation codes 0Ch and C0h through FFh are vendor-specific. All other operation codes are reserved.

6.2 Summary of commands for attached media changers

Attached media changers shall support the READ ELEMENT STATUS ATTACHED and MOVE MEDIUM ATTACHED commands (see table 3) in addition to the commands defined by the primary device type. Attached media changers shall not support other media changer commands (e.g. EXCHANGE MEDIUM).

Table 3 — Commands for attached media changers

Command name	Operation Code	Type	Subclause
MOVE MEDIUM ATTACHED	A7h	M	6.7
MOVE MEDIUM ATTACHED *	A5h	O	6.7
READ ELEMENT STATUS ATTACHED	B4h	M	6.10
READ ELEMENT STATUS ATTACHED *	B8h	O	6.10
Key: M = command implementation is mandatory. O = command implementation is optional. * = optional operation codes for use by sequential devices only.			

Sequential devices, (primary device type 1) may also use operation codes A5h for MOVE MEDIUM ATTACHED and B8h for READ ELEMENT STATUS ATTACHED.

6.3 Commands allowed in the presence of various reservations

Reservation restrictions are placed on commands as a result of access qualifiers associated with the type of reservation.

The details of which SMC commands are allowed under what types of reservations are described in table 4. For the reservation restrictions placed on commands for the reserve/release management method see table 4 column [A]. For the reservation restrictions placed on commands for the persistent reservations management method, see the columns under [B] in table 4. Reservation restrictions of commands defined by SPC are described in SPC.

In table 4 the following key words are used:

allowed: Commands issued by initiators not holding the reservation or by initiators not registered when a registrant only persistent reservation is present should complete normally.

conflict: Commands issued by initiators not holding the reservation or by initiators not registered when a registrant only persistent reservation is present shall not be performed and the device server shall terminate the command with a RESERVATION CONFLICT status.

Commands from initiators holding a reservation should complete normally. The behavior of commands from registered initiators when a registrant only or all registrants persistent reservation is present is specified in table 4.

~~A command that does not explicitly write the medium shall be checked for reservation conflicts before the command enters the current task state for the first time. Once the command has entered the current task state, it shall not be terminated with a RESERVATION CONFLICT due to a subsequent reservation.~~

~~A command that explicitly writes the medium shall be checked for reservation conflicts before the device server modifies the medium or cache as a result of the command. Once the command has modified the medium, it shall not be terminated with a RESERVATION CONFLICT due to a subsequent reservation.~~

An unlinked command shall be checked for reservation conflicts before the task containing that command enters the enabled task state. The reservation state as it exists when the first command in a group of linked commands enters the enabled task state shall be used in checking for reservation conflicts for all commands in the task. Once a task has entered the enabled task state, the command or commands comprising that task shall not be terminated with a RESERVATION CONFLICT due to a subsequent reservation. Any command in a group of linked commands that changes the reservation state shall be the last command in the group.

For each command, this standard, SPC-2, or a related command standard defines the conditions that result in RESERVATION CONFLICT. Depending on the particular command standard the conditions are defined in that standard's device model clause or in the subclauses that define the specific commands. An annex in SPC-2 contains the RESERVATION CONFLICT information for some of the command sets.

Table 4— SMC commands allowed in the presence of various reservations

Command	Addressed LU is reserved by another initiator [A]	Addressed LU has this type of persistent reservation held by another initiator [B]				
		From any initiator		From registered Initiator (RR all types)	From Initiator not registered	
		Write Excl	Excl Access		Write Excl - RR	Excl Access - RR
EXCHANGE MEDIUM	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
INITIALIZE ELEMENT STATUS	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
INITIALIZE ELEMENT STATUS WITH RANGE	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
MOVE MEDIUM	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
MOVE MEDIUM ATTACHED	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
POSITION TO ELEMENT	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
READ ATTRIBUTE	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
READ ELEMENT STATUS CURDATA=0	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
READ ELEMENT STATUS CURDATA=1	Allowed	Allowed	Allowed	Allowed	Allowed	Allowed
READ ELEMENT STATUS ATTACHED CURDATA =0	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
READ ELEMENT STATUS ATTACHED CURDATA =1	Allowed	Allowed	Allowed	Allowed	Allowed	Allowed
RELEASE ELEMENT (6)/ RELEASE ELEMENT (10)	Allowed	Conflict	Conflict	Conflict	Conflict	Conflict
REQUEST VOLUME ELEMENT ADDRESS	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
RESERVE ELEMENT (6)/ RELEASE ELEMENT (10)	Conflict	Conflict	Conflict	Conflict	Conflict	Conflict
SEND VOLUME TAG	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
WRITE ATTRIBUTE	Conflict	Conflict	Conflict	Allowed	Conflict	Conflict
Key: LU=Logical Unit, Excl=Exclusive, RR=Registrants Only or All Registrants						

6.4 EXCHANGE MEDIUM command

The EXCHANGE MEDIUM command (see table 5) provides a means to exchange the volume in the source element address, with the volume located at a destination element address. Support of this command requires that the logical unit have the capability of handling two volumes at the same time or that it emulate this capability.

Support for this command is optional for an independent media changer. This command has no command parameter data. No command response data is returned.

A reservation conflict shall occur if an EXCHANGE MEDIUM command is received from an initiator other than the one holding a logical unit or element reservation.

Table 5— EXCHANGE MEDIUM command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (A6h)							
1	Reserved							
2	MEDIUM TRANSPORT ADDRESS							
3								
4	SOURCE ADDRESS							
5								
6	FIRST DESTINATION ADDRESS							
7								
8	SECOND DESTINATION ADDRESS							
9								
10	Reserved						INV1	INV2
11	CONTROL							

The volume in the SOURCE ADDRESS element is moved to the FIRST DESTINATION ADDRESS element and the volume that previously occupied the FIRST DESTINATION ADDRESS element is moved to the SECOND DESTINATION ADDRESS element. The SECOND DESTINATION ADDRESS element may or may not be the same as the SOURCE ADDRESS element. In the case of a simple exchange, SOURCE ADDRESS and SECOND DESTINATION ADDRESS are the same. The device capabilities page (see 7.3.1) of the MODE SENSE command provides a matrix which defines the supported source element type and first destination element type combinations for EXCHANGE MEDIUM commands when the source element type is the same as second destination element type.

If the SOURCE ADDRESS element is empty, or the FIRST DESTINATION ADDRESS element is empty, the command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code MEDIUM SOURCE ELEMENT EMPTY. If the SECOND DESTINATION ADDRESS element is full, and not the same as the SOURCE ADDRESS element, the command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code MEDIUM DESTINATION ELEMENT FULL.

The MEDIUM TRANSPORT ADDRESS field specifies the medium transport element that is to be used in executing this command. The default transport element address of zero may be used. If the MEDIUM TRANSPORT ADDRESS element has not been assigned or that element address has been assigned to a different element type, the logical unit shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.

The SOURCE ADDRESS, the FIRST DESTINATION ADDRESS, and the SECOND DESTINATION ADDRESS fields may represent a storage element, an import/export element, a data transfer element, or a medium transport element. If the element address specified has not been assigned to a specific element of the media changer, the logical unit shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.

An INV1 bit of one specifies that the volume shall be inverted prior to depositing the volume into the FIRST DESTINATION ADDRESS element. Support for this bit set to one is optional.

An INV2 bit of one specifies that the volume shall be inverted prior to depositing the volume into the SECOND DESTINATION ADDRESS element. Support for this bit set to one is optional.

If the media changer does not support volume rotation for handling double sided volumes, the INV1 and INV2 bits should be set to zero. If either of these bits is one, a logical unit which is not capable of volume rotation shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

6.5 INITIALIZE ELEMENT STATUS command

The INITIALIZE ELEMENT STATUS command (see table 6) shall cause the media changer to check all assigned element addresses for volume and any other status relevant to that element address. The intent of this command is to enable the Initiator to get a quick response from a subsequent READ ELEMENT STATUS command. It may be useful to issue this command after a power failure, or if a volume has been changed by an operator, or if configurations have been changed. The device server shall not return GOOD status for this command until checking is complete.

Table 6 — INITIALIZE ELEMENT STATUS command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (07h)							
1	Reserved							
2								
3								
4								
5	CONTROL							

Support for this command is optional for an independent media changer. This command has no command parameter data. No command response data is returned.

If an implementation does not support this command, the same function is provided in the READ ELEMENT STATUS command.

A reservation conflict shall occur if an INITIALIZE ELEMENT STATUS command is received from an initiator other than the one holding a logical unit or element reservation.

6.6 INITIALIZE ELEMENT STATUS WITH RANGE command

ELEMENT STATUS WITH RANGE command (see table 7) shall cause the media changer to check the specified elements for volume status and any other relevant status. The intent of this command is to enable the Initiator to get a quick response from a subsequent READ ELEMENT STATUS command. It may be useful to issue this command after a power failure, or if a volume has been changed by an operator, or if configurations have been changed. The device server shall not return GOOD status for this command until checking is complete.

Table 7 — INITIALIZE ELEMENT STATUS WITH RANGE command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (37h)							
1	Reserved						FAST	RANGE
2	STARTING ELEMENT ADDRESS							
3								
4	Reserved							
5	Reserved							
6	NUMBER OF ELEMENTS							
7								
8	Reserved							
9	CONTROL							

Support for this command is optional for an independent media changer. This command has no command parameter data. No command response data is returned.

A RANGE bit of zero indicates that all element addresses shall be checked and that the NUMBER OF ELEMENTS and STARTING ELEMENT ADDRESS fields are ignored. A RANGE bit of one indicates that the series of elements beginning at the specified STARTING ELEMENT ADDRESS for the specified NUMBER OF ELEMENTS shall be checked. If the NUMBER OF ELEMENTS field is zero, the range checked shall start with STARTING ELEMENT ADDRESS and continue through the last element address on the unit.

A FAST bit of one indicates that the specified elements shall be scanned for media presence only. A FAST bit of zero indicates that the specified elements shall be scanned for all relevant status.

A reservation conflict shall occur if an INITIALIZE ELEMENT STATUS WITH RANGE command is received from an initiator other than the one holding a logical unit or element reservation.

NOTE 4 — Prior to standardization, many medium changers implemented this command using a vendor specific OPERATION CODE of E7h.

6.7 MOVE MEDIUM command

The MOVE MEDIUM command (see table 8) requests that the target move a volume from a source element to a destination element. Support for this command is mandatory for both independent media changers and attached media changers.

A reservation conflict shall occur if a MOVE MEDIUM command is received from an initiator other than the one holding a logical unit or element reservation.

Table 8 — MOVE MEDIUM command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE							
1	Reserved							
2	MEDIUM TRANSPORT ADDRESS							
3								
4	SOURCE ADDRESS							
5								
6	DESTINATION ADDRESS							
7								
8	Reserved							
9								
10	Reserved							INV
11	CONTROL							

The MOVE MEDIUM OPERATION CODE for an independent media changer shall be A5h. An attached media changer shall use OPERATION CODE A7h for the MOVE MEDIUM ATTACHED command. Attached changers connected to a sequential primary device are also permitted to implement OPERATION CODE A5h as the MOVE MEDIUM ATTACHED command.

This command moves the volume from the element specified by SOURCE ADDRESS to the element specified by DESTINATION ADDRESS.

If the SOURCE ADDRESS element is empty, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code MEDIUM SOURCE ELEMENT EMPTY. If the DESTINATION ADDRESS element is full, and different from the SOURCE ADDRESS element, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code MEDIUM DESTINATION ELEMENT FULL.

The MEDIUM TRANSPORT ADDRESS field specifies the medium transport element that is to be used in executing this command. Attached media changers shall set this field to zero. Independent changers may set this field to zero to specify the default medium transport element. If the address specified has not been assigned or has been assigned to an element other than a medium transport element, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.

The SOURCE ADDRESS and the DESTINATION ADDRESS fields may represent a storage element, an import/export element, a data transfer element, or a medium transport element. If the address specified has not been assigned to a specific element of the media changer, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.

The device capabilities MODE SENSE page (see 7.3.1), provides a matrix with the supported source element or destination element combinations for the MOVE MEDIUM command

An INVERT bit of one specifies that the volume shall be inverted or rotated prior to depositing the medium into the DESTINATION ADDRESS element. If the media changer does not support volume rotation for handling double sided media, the INVERT bit should be set to zero. If this bit is one, a target that is not capable of volume rotation shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

6.8 POSITION TO ELEMENT command

The POSITION TO ELEMENT command (see table 9) shall position the MEDIUM TRANSPORT ADDRESS element such that further motion of the MEDIUM TRANSPORT ADDRESS element is unnecessary to execute an appropriate MOVE MEDIUM command between the MEDIUM TRANSPORT ADDRESS element and the DESTINATION ADDRESS element.

Support for this command is optional for independent media changers. This command has no command parameter data. No command response data is returned.

A reservation conflict shall occur if a POSITION TO ELEMENT command is received from an initiator other than the one holding a logical unit or element reservation.

Table 9 — POSITION TO ELEMENT command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (2Bh)							
1	Reserved							
2	MEDIUM TRANSPORT ADDRESS							
3								
4	DESTINATION ADDRESS							
5								
6	Reserved							
7								
8	Reserved							INVERT
9	CONTROL							

An INVERT bit value of one requests that the MEDIUM TRANSPORT ADDRESS element be inverted or rotated before positioning in front of the destination element address. A value of zero requests that the orientation of the MEDIUM TRANSPORT ADDRESS element be unchanged before positioning in front of the DESTINATION ADDRESS element. Support for this bit set to one is optional.

6.9 READ ATTRIBUTE command

The READ ATTRIBUTE command (see table 10) allows an application client to read attribute values to Medium Auxillary Memory (MAM) and also to discover what MAM exists at the device server.

Support for this command is optional for independent media changers. This command has no command parameter data. Command response data is returned.

A reservation conflict shall occur if a READ ATTRIBUTE command is received from an initiator other than the one holding a logical unit or element reservation.

Table 10— READ ATTRIBUTE command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (8Ch)							
1	Reserved			SERVICE ACTION				
2	ELEMENT ADDRESS							
3								
4	ELEMENT TYPE CODE							
5	Volume number							
6	reserved							
7	Partition number							
8	FIRST ATTRIBUTE ID							
9								
10	ALLOCATION LENGTH							
11								
8	Reserved							
9	CONTROL							

The element address field specifies the element where the MAM currently resides (as part of a medium). This might mean, for example, a MAM inside a medium residing in a storage element or a MAM inside a medium residing in a data transfer element. Not that this field forms an additional location qualifier hierarchically superior to VOLUME NUMBER and PARTITION NUMBER.

For ELEMENT TYPE CODE values, see table 14.

Table 11 defines the SERVICE ACTION codes implemented for media changer devices only. For other values of SERVICE ACTION, see SPC.

Table 11 —READ ATTRIBUTE service action codes

Code	Name	Description
04h	ELEMENT LIST	Return a list of elements containing MAM

For the definition of all other fields in this command, see SPC.

ELEMENT LIST service action

This service action is used to retrieve all of the element addresses containing an accessible MAM. Table 12 shows the format of the information returned from the device server in response to this service action.

Table 12 — Parameter data for ELEMENT LIST service action

Bit	7	6	5	4	3	2	1	0
Byte								
0	MSB Available data (n-3) LSB							
1								
2								
3								
4	Element type code							
5	First Element Address							
6								
7	NUMBER OF ELEMENTS							
8								

NOTE 5 — Since all the element addresses shall contain an accessible MAM, the list of elements returned (of the same element type code) may be non-contiguous.

6.10 READ ELEMENT STATUS command

The READ ELEMENT STATUS command (see table 13) requests that the target report the status of its internal elements to the initiator. Support for this command is mandatory for both attached media changers and independent media changers.

Table 13 — READ ELEMENT STATUS command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE							
1	Reserved			VOLTAG	ELEMENT TYPE CODE			
2	STARTING ELEMENT ADDRESS							
3								
4	NUMBER OF ELEMENTS							
5								
6	Reserved						CURDATA	DVCID
7	ALLOCATION LENGTH							
8								
9								
10	Reserved							
11	CONTROL							

The READ ELEMENT STATUS OPERATION CODE for an independent media changer shall be B8h. An attached media changer shall use OPERATION CODE B4h for the READ ELEMENT STATUS ATTACHED command. Attached changers connected to a sequential primary device may also implement OPERATION CODE B8h as the READ ELEMENT STATUS ATTACHED command.

A volume tag (VOLTAG) bit of one indicates that the target shall report volume tag information if this feature is supported. A value of zero indicates that volume tag information shall not be reported. If the volume tag feature is not supported this bit shall be treated as reserved.

If the current data (CURDATA) bit is one, the target shall return element status data without causing device motion. If the CURDATA bit is zero, the target may cause device motion to confirm element status data. Support for the CURDATA bit set to one is mandatory.

A reservation conflict shall occur if a READ ELEMENT STATUS or READ ELEMENT STATUS ATTACHED command with the CURDATA bit set to zero is received from an initiator other than the one

holding a logical unit or element reservation. If the CURDATA bit is set to one, a reservation conflict shall not occur.

The ELEMENT TYPE CODE field specifies the particular element type(s) selected for reporting by this command. A value of zero specifies that status for all element types shall be reported. The element type codes are defined in table 14.

Table 14 —Element type code

Code	Description
0h	All element types reported, (valid in CDB only)
1h	Medium transport element
2h	Storage element
3h	Import/export element
4h	Data transfer element
5h - Fh	Reserved

The STARTING ELEMENT ADDRESS field specifies the minimum element address to report. Only elements with an element type code permitted by the ELEMENT TYPE CODE field, and an element address greater than or equal to STARTING ELEMENT ADDRESS shall be reported. Element descriptor blocks are not generated for undefined element addresses.

The NUMBER OF ELEMENTS field specifies the maximum number of element descriptors to be created by the target for this command. The value specified by this field is not the range of element addresses to be considered for reporting but rather the number of defined elements to report. If the ALLOCATION LENGTH field is not sufficient to transfer all the element descriptors, the target shall transfer all those descriptors that can be completely transferred and this shall not be considered an error.

A device ID (DVCID) bit of one specifies that the target shall return device identifiers, if available, for the specified range. A DVCID bit of zero specifies that the target shall not return device identifiers. If the device ID feature is not supported, the DVCID bit shall be treated as reserved.

6.10.1 Element status data

The data returned by the READ ELEMENT STATUS command is defined in table 15 and 6.10.2 through 6.10.7. Element status data consists of an eight-byte header (see table 15), followed by zero or more element status pages.

Table 15 — Element status data

Bit	7	6	5	4	3	2	1	0
Byte								
0	FIRST ELEMENT ADDRESS REPORTED							
1								
2	NUMBER OF ELEMENTS AVAILABLE							
3								
4	Reserved							
5	BYTE COUNT OF REPORT AVAILABLE (all pages, n-7)							
6								
7								
8	Element status page(s)							
n								

The FIRST ELEMENT ADDRESS REPORTED field indicates the element address of the element with the smallest element address found to meet the CDB request.

The NUMBER OF ELEMENTS AVAILABLE field indicates the number of elements meeting the request in the command descriptor block. The status for these elements is returned if sufficient ALLOCATION LENGTH was specified.

The BYTE COUNT OF REPORT AVAILABLE field indicates the number of bytes of element status page data available for all elements meeting the request in the command descriptor block. This value shall not be adjusted to match the ALLOCATION LENGTH available.

NOTE 6 — The READ ELEMENT STATUS command can be issued with an ALLOCATION LENGTH of eight bytes in order to determine the ALLOCATION LENGTH required to transfer all the element status data specified by the command.

6.10.2 Element status page

The element status page is defined in table 16. Each element status page includes an eight-byte header followed by zero or more element descriptor blocks. The header includes the element type code, the length of each descriptor block and the number of bytes of element descriptor information that follow the header for this element type.

Table 16 —Element status page

Bit	7	6	5	4	3	2	1	0
Byte								
0	ELEMENT TYPE CODE							
1	PVOLTAG	AVOLTAG	Reserved					
2	ELEMENT DESCRIPTOR LENGTH (z)							
3								
4	Reserved							
5	BYTE COUNT OF DESCRIPTOR DATA AVAILABLE (this page, y - 7)							
6								
7								
8	Element descriptor(s)							
y								

The ELEMENT TYPE CODE field indicates the element type (see table 14) reported by this page.

A primary volume tag (PVOLTAG) bit of one indicates that the PRIMARY VOLUME TAG INFORMATION field is present in each of the following element descriptor blocks. A value of zero indicates that these bytes are omitted from the element descriptors that follow.

An alternate volume tag (AVOLTAG) bit of one indicates that the ALTERNATE VOLUME TAG INFORMATION field is present in each of the following element descriptor blocks. A value of zero indicates that these bytes are omitted from the element descriptors that follow.

The ELEMENT DESCRIPTOR LENGTH field indicates the number of bytes in each element descriptor.

The BYTE COUNT OF DESCRIPTOR DATA AVAILABLE field indicates the number of bytes of element descriptor data available for elements of this element type meeting the request in the CDB. This value shall not be adjusted to match the ALLOCATION LENGTH available.

Each element descriptor includes the element address and status flags; it may also contain sense code information as well as other information depending on the element type (see 6.10.3 through 6.10.7).

6.10.3 Medium transport element descriptor

Table 17 defines the medium transport element descriptor.

Table 17—Medium transport element descriptor

Bit	7	6	5	4	3	2	1	0	
Byte									
0	ELEMENT ADDRESS								
1									
2	Reserved					EXCEPT	RSVD	FULL	
3	Reserved								
4	ADDITIONAL SENSE CODE								
5	ADDITIONAL SENSE CODE QUALIFIER								
6	Reserved								
8									
9	SVALID	INVERT	Reserved						
10	SOURCE STORAGE ELEMENT ADDRESS								
11									
...									
(36 bytes)	PRIMARY VOLUME TAG INFORMATION (field omitted if PVOLTAG=0)								
(36 bytes)	ALTERNATE VOLUME TAG INFORMATION (field omitted if AVOLTAG =0)								
...									
(1 byte)	Reserved					CODE SET			
(1 byte)	Reserved					IDENTIFIER TYPE			
(1 byte)	Reserved								
(1 byte)	IDENTIFIER LENGTH (x)								
(x bytes)	IDENTIFIER								
...									
to z-1	Vendor-specific								

The ELEMENT ADDRESS field gives the address of the media changer element whose status is reported by this element descriptor block.

An exception (EXCEPT) bit of one indicates the element is in an abnormal state. An exception bit of zero indicates the element is in a normal state. If this bit is one, information on the abnormal state may be available in the ADDITIONAL SENSE CODE and ADDITIONAL SENSE CODE QUALIFIER fields.

A FULL bit value of one indicates that the element contains a unit of media. A value of zero indicates that the element does not contain a unit of media. When the EXCEPT bit is one, the value of the FULL bit is not valid.

The ADDITIONAL SENSE CODE field may provide specific information on an abnormal element state. The values in this field are as defined for the ADDITIONAL SENSE CODE field of REQUEST SENSE command response data (see SPC). This field is valid only if the EXCEPT bit is one.

The ADDITIONAL SENSE CODE QUALIFIER field may provide more detailed information on an abnormal element state. The values in this field are as defined for the ADDITIONAL SENSE CODE QUALIFIER field of REQUEST SENSE command response data (see SPC). This field is valid only if the EXCEPT bit is one.

A source valid (SVALID) bit value of one indicates that the SOURCE STORAGE ELEMENT ADDRESS field and the INVERT bit information are valid. A value of zero indicates that the values in these fields are not valid.

An INVERT bit value of one indicates that the unit of media now in this element was inverted by MOVE MEDIUM or EXCHANGE MEDIUM operations since it was last in the SOURCE STORAGE ELEMENT ADDRESS. A value of zero indicates that no inversion occurred during the operation.

The SOURCE STORAGE ELEMENT ADDRESS field provides the address of the last storage element this unit of media occupied. This field is valid only if the SVALID bit is one.

The PRIMARY VOLUME TAG INFORMATION and ALTERNATE VOLUME TAG INFORMATION fields provide for identifying the unit of media residing in this element (see 5.9). Either or both of these fields may be omitted for all the element descriptor blocks that comprise an element status page as indicated by the PVOLTAG and AVOLTAG bits in the element status page header.

The CODE SET field and IDENTIFIER TYPE field are defined in 6.10.7.

The IDENTIFIER LENGTH field contains the length in bytes of the IDENTIFIER field (see 6.10.7). If no device identifier is available, or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH field shall be zero and the CODE SET and IDENTIFIER TYPE fields shall also be zero.

The IDENTIFIER field provides a device identifier for this medium transport element as defined in 6.10.7. If no device identifier is available for this element, or the DVCID bit in the CDB is zero, this field shall be omitted.

6.10.4 Storage element descriptor

Table 18 defines the storage element descriptor.

Table 18 — Storage element descriptor

Bit	7	6	5	4	3	2	1	0
Byte								
0	ELEMENT ADDRESS							
1								
2	Reserved			ACCESS	EXCEPT	RSVD	FULL	
3	Reserved							
4	ADDITIONAL SENSE CODE							
5	ADDITIONAL SENSE CODE QUALIFIER							
6	Reserved							
8								
9	SVALID	INVERT	Reserved					
10	SOURCE STORAGE ELEMENT ADDRESS							
11								
...								
(36 bytes)	PRIMARY VOLUME TAG INFORMATION (field omitted if PVOLTAG=0)							
(36 bytes)	ALTERNATE VOLUME TAG INFORMATION (field omitted if AVOLTAG=0)							
...								
(1 byte)	Reserved				CODE SET			
(1 byte)	Reserved				IDENTIFIER TYPE			
(1 byte)	Reserved							
(1 byte)	IDENTIFIER LENGTH (x)							
(x bytes)	IDENTIFIER							
...								
to z-1	Vendor-specific							

An ACCESS bit value of one indicates that access to the element by a medium transport element is allowed. An ACCESS bit of zero indicates that access to the element by the medium transport element is denied. When the EXCEPT bit is one, the value of the ACCESS bit is not valid.

The SOURCE STORAGE ELEMENT ADDRESS field provides the address of the last storage element this unit of media occupied. This element address value may or may not be the same as this element. This field is valid only if the SVALID bit is one.

The CODE SET field and IDENTIFIER TYPE field are defined in 6.10.7.

The IDENTIFIER LENGTH field contains the length in bytes of the IDENTIFIER field (see 6.10.7). If no device identifier is available, or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH field shall be zero and the CODE SET and IDENTIFIER TYPE fields shall also be zero.

The IDENTIFIER field provides a device identifier for this storage element as defined in 6.10.7. If no device identifier is available for this element, or the DVCID bit in the CDB is zero, this field shall be omitted.

For fields not defined in this subclause, see 6.10.3.

6.10.5 Import/export element descriptor

Table 19 defines the import/export element descriptor.

Table 19 — Import/export element descriptor

Bit	7	6	5	4	3	2	1	0
Byte								
0	ELEMENT ADDRESS							
1								
2	Rsvd	cmc	INENAB	EXENAB	ACCESS	EXCEPT	IMPEXP	FULL
3	Reserved							
4	ADDITIONAL SENSE CODE							
5	ADDITIONAL SENSE CODE QUALIFIER							
6	Reserved							
8								
9	SVALID	INVERT	Reserved					
10	SOURCE STORAGE ELEMENT ADDRESS							
11								
...								
(36 bytes)	PRIMARY VOLUME TAG INFORMATION (field omitted if PVOLTAG=0)							
(36 bytes)	ALTERNATE VOLUME TAG INFORMATION (field omitted if AVOLTAG=0)							
...								
(1 byte)	Reserved				CODE SET			
(1 byte)	Reserved				IDENTIFIER TYPE			
(1 byte)	Reserved							
(1 byte)	IDENTIFIER LENGTH (x)							
(x bytes)	IDENTIFIER							
...								
To z-1	Vendor-specific							

A connected media changer (CMC) bit of one indicates that exports are to a connected media changer's domain and imports are from a connected media changer's domain. A CMC bit of zero indicates that exports are to the operator's domain and imports are from the operator's domain.

If the CMC bit is zero, media shall not leave the domain of the media changer when prevented by the PREVENT ALLOW MEDIA REMOVAL command (see SPC). If the CMC bit is one, the PREVENT ALLOW MEDIA REMOVAL command shall not prevent export operations to a connected media changer.

An import enable (INENAB) bit of one indicates that the import/export element supports movement of media into the scope of the media changer device. An INENAB bit of zero indicates that this element does not support import actions.

An export enable (EXENAB) bit of one indicates that the import/export element supports movement of media out of the scope of the media changer device. An EXENAB bit of zero indicates that this element does not support export actions.

An ACCESS bit of one indicates that access to the import/export element by a medium transport element is allowed. An ACCESS bit of zero indicates access to the import/export element by medium transport elements is denied. When the EXCEPT bit is one, the value of the ACCESS bit is invalid.

NOTE 7— An example of when access would be denied is when the operator has exclusive access to the import/export element.

An import export (IMPEXP) bit of one indicates the unit of media in the import/export element was placed there by an operator. An IMPEXP bit of zero indicates the unit of media in the import/export element was placed there by the medium transport element. When the EXCEPT bit is one, the value of the IMPEXP bit is invalid.

The CODE SET field and IDENTIFIER TYPE field are defined in 6.10.7.

The IDENTIFIER LENGTH field contains the length in bytes of the IDENTIFIER field (see 6.10.7). If no device identifier is available, or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH field shall be zero and the CODE SET and IDENTIFIER TYPE fields shall also be zero.

The IDENTIFIER field provides a device identifier for this import/export element as defined in 6.10.7. If no device identifier is available for this element, or the DVCID bit in the CDB is zero, this field shall be omitted.

For fields not defined in this subclause, see 6.10.3.

6.10.6 Data transfer element descriptor

Table 20 defines the data transfer element descriptor.

Table 20 —Data transfer element descriptor

Bit	7	6	5	4	3	2	1	0
Byte								
0	ELEMENT ADDRESS							
1								
2	Reserved				ACCESS	EXCEPT	RSVD	FULL
3	Reserved							
4	ADDITIONAL SENSE CODE							
5	ADDITIONAL SENSE CODE QUALIFIER							
6	NOT BUS	RSVD	ID VALID	LU VALID	RSVD	LOGICAL UNIT NUMBER		
7	SCSI BUS ADDRESS							
8	Reserved							
9	SVALID	INVERT	Reserved					
10	SOURCE STORAGE ELEMENT ADDRESS							
11								
...								
(36 bytes)	PRIMARY VOLUME TAG INFORMATION (field omitted if PVOLTAG=0)							
(36 bytes)	ALTERNATE VOLUME TAG INFORMATION (field omitted if AVOLTAG=0)							
...								
(1 byte)	Reserved				CODE SET			
(1 byte)	Reserved				IDENTIFIER TYPE			
(1 byte)	Reserved							
(1 byte)	IDENTIFIER LENGTH (x)							
(x bytes)	IDENTIFIER							
...								
to z-1	Vendor-specific							

An ACCESS bit value of one indicates access to the data transfer element by the medium transport element is allowed. A value of zero indicates access to the data transfer element by a medium transport element is denied.

NOTE 8— Access to the data transfer element by medium transport elements might be denied if a data transfer operation was under way. Note that a one value in this bit may not be sufficient to ensure a successful operation. This bit can only reflect the best information available to the media changer device, which may not accurately reflect the state of the primary (data transfer) device.

The NOT BUS bit, ID VALID bit, SCSI BUS ADDRESS field, LU VALID bit and LOGICAL UNIT NUMBER field return information about addressing other devices connected to an independent media changer. These fields shall be set to zero in an attached media changer. If the SCSI bus address of the other device is over 255, the ID VALID bit shall be set to zero. If the lun address is over 7, the LU VALID bit shall be set to zero.

A not this bus (NOT BUS) bit value of one indicates that the SCSI BUS ADDRESS and LOGICAL UNIT NUMBER values may not be valid for the SCSI bus used to select the media changer device. A NOT BUS bit value of zero indicates that the SCSI address and logical unit values, are on the same bus as the media changer device. If the ID VALID and LU VALID bits are zero, this bit shall be ignored.

An ID VALID bit value of one indicates that the SCSI BUS ADDRESS field contains valid information. An LU VALID bit value of one indicates that the LOGICAL UNIT NUMBER field contains valid information.

The SCSI BUS ADDRESS field, if valid, provides the SCSI address of the primary device served by the media changer at this element address.

The LOGICAL UNIT NUMBER field, if valid, provides the logical unit number within the SCSI bus device of the primary device served by the media changer at this element address.

The CODE SET field and IDENTIFIER TYPE field are defined in 6.10.7.

The IDENTIFIER LENGTH field contains the length in bytes of the IDENTIFIER field (see 6.10.7). If no device identifier is available, or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH field shall be zero and the CODE SET and IDENTIFIER TYPE fields shall also be zero.

The IDENTIFIER field provides a device identifier for the primary device associated with this data transfer element as defined in 6.10.7. If no device identifier is available for this element, or the DVCID bit in the CDB is zero, this field shall be omitted.

For fields not defined in this subclause, see 6.10.3.

6.10.7 Identification descriptor

Table 21 defines the identification descriptor fields returned in element descriptors.

Table 21 — Identification descriptor fields

Bit	7	6	5	4	3	2	1	0
Byte								
(1 byte)	Reserved				CODE SET			
(1 byte)	Reserved				IDENTIFIER TYPE			
(1 byte)	Reserved							
(1 byte)	IDENTIFIER LENGTH (x)							
(x bytes)	IDENTIFIER							

The CODE SET, IDENTIFIER TYPE, IDENTIFIER LENGTH and IDENTIFIER fields in element descriptors are defined by the device identification page in SPC. Device identifiers may be available for some or all elements in a media changer. If no device identifier is available or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH shall be zero, the IDENTIFIER field is omitted, and the CODE SET and IDENTIFIER TYPE fields shall be zero.

Within the element descriptors for a single element status page, the device server may pad IDENTIFIER fields to the right with 00h to achieve a consistent length between such fields.

For a data transfer element, the IDENTIFIER field returns a device identifier from the primary device (disk or tape drive) associated with this element. ~~The~~ With the exception of 00h padding in the IDENTIFIER field, the same CODE SET, IDENTIFIER TYPE, IDENTIFIER LENGTH and IDENTIFIER fields should be available via an INQUIRY command (see SPC) issued to the primary device.

For an import/export element, the IDENTIFIER field returns a unique identifier for the import/export device. An element used to exchange media between two media changers should return the same CODE SET, IDENTIFIER TYPE, IDENTIFIER LENGTH and IDENTIFIER fields via either media changer.

For a storage or medium transport element the CODE SET, IDENTIFIER TYPE, IDENTIFIER LENGTH and IDENTIFIER fields refer to the element, and are not an identifier for a volume stored in this location.

6.11 RELEASE ELEMENT (6) command

The RELEASE ELEMENT (6) command (see table 22) is used to release a previously reserved logical unit, or, if the element release option is implemented, to release previously reserved elements within units.

Table 22 — RELEASE ELEMENT (6) command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (17h)							
1	Reserved			Obsolete				ELEMENT
2	RESERVATION IDENTIFICATION							
3	Reserved							
4								
5	CONTROL							

Attached media changers shall implement the RESERVE (6) command as defined in the SPC. Element reservations are not allowed in attached media changer usage.

NOTE 9—The ELEMENT bit is in the same position as the EXTENT bit in the SPC definition of RESERVE (6). An attached media changer with a primary device that supports extents can not distinguish element from extent reservations.

The RESERVE ELEMENT and RELEASE ELEMENT commands provide the basic mechanism for contention resolution in multiple initiator systems. A reservation may only be released by a RELEASE command from the initiator that made it. It is not an error for an application client to attempt to release a reservation that is not currently valid, or is held by another initiator. In this case, the device server shall return GOOD status without altering any other reservation.

6.11.1 Logical unit release (Mandatory)

If the ELEMENT bit is zero, this command shall cause the device server to terminate all unit and element reservations that are active from the initiator to the specified logical unit. The RESERVATION IDENTIFICATION field in the command descriptor shall be ignored by the device server.

6.11.2 Element release (Optional)

If the ELEMENT bit is one and the element release option is implemented, this command shall cause any reservation from the requesting initiator with a matching reservation identification to be terminated. Other reservations from the requesting initiator shall remain in effect. If the ELEMENT bit is one and the element release option is not implemented, the RELEASE ELEMENT command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB. This option shall be implemented if the element reservation option (see 6.14.2) is implemented.

6.12 RELEASE ELEMENT (10) command

The RELEASE ELEMENT (10) command (see table 23) is used to release a previously reserved logical unit, or if the element release option is implemented, to release previously reserved elements within units. This clause describes only those instances where the RELEASE ELEMENT (10) command differs from the RELEASE ELEMENT (6) command. Except for the instances described in this clause, the RELEASE ELEMENT (10) command shall function exactly like the RELEASE ELEMENT (6) command (see 6.11).

Table 23 — RELEASE ELEMENT (10) command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (57h)							
1	Reserved			3RDPTY	Reserved		LONGID	ELEMENT
2	RESERVATION IDENTIFICATION							
3	THIRD PARTY DEVICE ID							
4	Reserved							
5								
6								
7	PARAMETER LIST LENGTH							
8								
9	CONTROL							

6.12.1 Third-party release (Mandatory)

The third-party release option of the RELEASE ELEMENT command allows an initiator to release a unit or elements within a unit that were previously reserved using third-party reservation (see 6.15.1). Third-party release shall be implemented if third-party reserve is implemented.

If the third-party (3RDPTY) bit is zero, the third-party release option is not requested. If the 3RDPTY bit is one and the target implements the third-party release option, the target shall release the specified unit or elements, but only if the reservation was made using the third-party reservation option by the initiator that is requesting the release for the same SCSI device as specified in the THIRD PARTY DEVICE ID field.

The format of THIRD PARTY DEVICE ID is protocol specific. If the THIRD PARTY DEVICE ID value associated with the reservation release is smaller than 255, the LONGID bit may be zero and the THIRD PARTY DEVICE ID value sent in the CDB. If the LONGID bit is zero, the PARAMETER LIST LENGTH field shall be set to zero. If the THIRD PARTY DEVICE ID value is greater than 255, the LONGID bit shall be one.

Device servers that support device IDs greater than 255 shall accept commands with LONGID equal to one. Device servers whose devices IDs are limited to 255 or smaller may reject commands with LONGID equal to one with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

If the LONGID bit is one, the PARAMETER LIST LENGTH shall be eight, and the parameter list shall have the format shown in table 24. If the LONGID bit is one, the THIRD PARTY DEVICE ID field in the CDB shall be ignored. If the LONGID bit is one and the PARAMETER LIST LENGTH is not eight, the device server shall return a CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code PARAMETER LIST LENGTH ERROR.

Table 24 — RELEASE ELEMENT (10) parameter list

Bit	7	6	5	4	3	2	1	0
Byte								
0	THIRD PARTY DEVICE ID							
7								

6.13 REQUEST VOLUME ELEMENT ADDRESS command

The REQUEST VOLUME ELEMENT ADDRESS command (see table 25) is used to transfer the results of a SEND VOLUME TAG command. Multiple REQUEST VOLUME ELEMENT ADDRESS commands may be used to retrieve the results of a single SEND VOLUME TAG command with the translate option.

Support for this command is optional for independent media changers. This command has no command parameter data. This command returns command response data.

A reservation conflict shall occur if a REQUEST VOLUME ELEMENT ADDRESS command is received from an initiator other than the one holding a logical unit or element reservation.

The command response data returned by this command consists of a header as defined by table 26, plus zero or more element type specific pages in the same format as defined by the READ ELEMENT STATUS command (see 6.10).

For each SEND VOLUME TAG command, the logical unit shall be able to report in response to a REQUEST VOLUME ELEMENT ADDRESS command zero or more elements that match a volume tag template in element address order. Once information for a given element address has been reported, only higher element addresses will be reported by subsequent REQUEST VOLUME ELEMENT ADDRESS commands.

If a REQUEST VOLUME ELEMENT ADDRESS command is received and no prior SEND VOLUME TAG command has been executed or the element list has been completely reported for the most recent successful SEND VOLUME TAG command, the logical unit shall return command response data consisting of only the volume element address header.

NOTE 10— In order to ensure the successful completion of a SEND VOLUME TAG, REQUEST VOLUME ELEMENT ADDRESS command sequence in a multi-initiator environment, it may be necessary to reserve the logical unit to the initiator prior to sending the SEND VOLUME TAG command and release the logical unit after the last REQUEST VOLUME ELEMENT ADDRESS command has completed.

Table 25 — REQUEST VOLUME ELEMENT ADDRESS command

Bit Byte	7	6	5	4	3	2	1	0
0	OPERATION CODE (B5h)							
1	Reserved			VOLTAG	ELEMENT TYPE CODE			
2	ELEMENT ADDRESS							
3								
4	NUMBER OF ELEMENTS TO REPORT							
5								
6	Reserved							
7	ALLOCATION LENGTH							
8								
9								
10	Reserved							
11	CONTROL							

A volume tag (VOLTAG) bit of one indicates that the logical unit shall report volume tag information, if implemented by the logical unit. A value of zero indicates that volume tag information shall not be reported. Support for this bit set to one is optional.

The ELEMENT TYPE CODE field specifies the particular element type(s) selected for reporting by this command. A value of zero specifies that status for all element types shall be reported. The element type codes are defined by table 14. This field value determines the element types to be reported from information prepared by the most recently successful SEND VOLUME TAG command.

The ELEMENT ADDRESS field gives a media changer element address whose interpretation depends on the SEND ACTION CODE field (see table 32) of the last successful SEND VOLUME TAG command. The SEND ACTION CODE is returned in the volume element address header. When the last SEND ACTION CODE was a translate, the ELEMENT ADDRESS field gives the minimum element address to be reported by this command. When the SEND ACTION CODE is assert, replace, and undefine, the ELEMENT ADDRESS field gives the particular element whose volume tag information was modified.

The NUMBER OF ELEMENTS TO REPORT field specifies the maximum number of elements to be reported for this command. The value specified in this field is the number of elements to report of those that match the last SEND VOLUME TAG command translate template. If the ALLOCATION LENGTH is not sufficient to transfer all the element descriptors, the logical unit shall transfer all those descriptors that can be completely transferred and this shall not be considered an error.

Table 26 — Volume element address header

Bit	7	6	5	4	3	2	1	0
Byte								
0	FIRST ELEMENT ADDRESS REPORTED							
1								
2	NUMBER OF ELEMENTS REPORTED							
3								
4	Reserved			SEND ACTION CODE				
5	BYTE COUNT OF REPORT AVAILABLE (all pages, x - 7)							
6								
7								
8	Element status page(s)							
x								

The SEND ACTION CODE field (see table 32) reports the function performed by the last SEND VOLUME TAG command.

For fields not defined in this subclause, see the READ ELEMENT STATUS command description.

6.14 RESERVE ELEMENT (6) command

The RESERVE ELEMENT (6) command (see table 27) is used to reserve a logical unit or, if the element reservation option is implemented, elements within a logical unit.

Table 27 — RESERVE ELEMENT (6) command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (16h)							
1	Reserved			Obsolete				ELEMENT
2	RESERVATION IDENTIFICATION							
3	ELEMENT LIST LENGTH							
4								
5	CONTROL							

The RESERVE ELEMENT (6) and RELEASE ELEMENT (6) commands provide the basic mechanism for contention resolution in multiple-initiator systems.

If the RESERVE ELEMENT (6) command is implemented, then the RELEASE ELEMENT (6) also shall be implemented. Attached media changers shall implement the RESERVE (6) command as defined in SPC. Element reservations are not allowed in attached media changer usage.

NOTE 11 — The ELEMENT bit is in the same position as the EXTENT bit in the SPC definition of RESERVE (6). An attached media changer with a primary device that supports extents can not distinguish element from extent reservations.

6.14.1 Logical unit reservation (Mandatory)

If the ELEMENT bit is zero, this command shall request that the entire logical unit be reserved for the exclusive use of the initiator as defined in SPC. If the ELEMENT bit is zero, the RESERVATION IDENTIFICATION and the ELEMENT LIST LENGTH fields shall be ignored.

If the unit, or any element within the unit, is reserved for another initiator, the target shall respond by returning RESERVATION CONFLICT status.

If, after honoring the reservation, any other initiator attempts to perform any command on the reserved unit other than an INQUIRY, REQUEST SENSE, RESERVE, RELEASE command, or a READ ELEMENT STATUS command with a curdata bit of 1, the command shall be rejected with RESERVATION CONFLICT status.

6.14.2 Element reservation (optional)

The RESERVATION IDENTIFICATION field provides a means for an application client to identify each element reservation. This allows an application client in a multiple tasking environment to have multiple reservations outstanding. The RESERVATION IDENTIFICATION field is used in the RELEASE ELEMENT command to specify which reservation is to be released. It is also used in superseding RESERVE ELEMENT commands to specify which reservation is to be superseded.

If the element reservation option is implemented, the element release option (see 6.11.2) shall also be implemented. These options permit multiple groups of elements within the unit to be reserved, each with a separate reservation identification.

If the ELEMENT bit is one, and the element reservation option is implemented, the device server shall process the reservation request as follows:

- The element list shall be checked for valid element addresses. If any element address is invalid for this unit, the command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS. If any element descriptor in the element list specifies an element already specified in another element descriptor in the list, the command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS;
- If the requested reservation does not conflict with any active or previously requested reservation, the elements specified shall be reserved until superseded by another valid RESERVE command from the initiator that made the reservation, or until released by a RELEASE command from the same initiator, by a TARGET RESET task management function from any initiator, by a hard reset condition, or by a power on cycle. If either of the last three conditions occur, a unit attention condition shall be generated;
- If the reservation request conflicts with an existing reservation, then the device server shall return RESERVATION CONFLICT status;
- If the ELEMENT bit is one, and the element reservation option is not implemented, the RESERVE command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

The size of the element list shall be defined by the ELEMENT LIST LENGTH parameter. The element list shall consist of zero or more descriptors as shown in table 28. Each element list descriptor defines a series of elements beginning at the specified ELEMENT ADDRESS for the specified NUMBER OF ELEMENTS. If the NUMBER OF ELEMENTS field is zero, the element list shall begin at ELEMENT ADDRESS and continue through the last element address on the unit.

Table 28 — Data format of element list descriptors

Bit	7	6	5	4	3	2	1	0
Byte								
0	Reserved							
1								
2	NUMBER OF ELEMENTS							
3								
4	ELEMENT ADDRESS							
5								

If an initiator issues a command to an element that has been reserved by a different initiator, the command shall not be performed and the command shall be terminated with a RESERVATION CONFLICT status. If a reservation conflict precludes any part of the command, none of the command shall be performed.

6.15 RESERVE ELEMENT (10) command

The RESERVE ELEMENT (10) command (see table 29) is used to reserve a logical unit or, if the element reservation option is implemented, elements within a logical unit. This subclause describes only those instances where the RESERVE ELEMENT (10) command differs from the RESERVE ELEMENT (6) command. Except for the instances described in this clause, the RESERVE ELEMENT (10) command shall function exactly like the RESERVE ELEMENT (6) command (see 6.14).

Table 29 — RESERVE ELEMENT (10) command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (56h)							
1	Reserved			3RDPTY	Reserved		LONGID	ELEMENT
2	RESERVATION IDENTIFICATION							
3	THIRD PARTY DEVICE ID							
4	Reserved							
5								
6								
7	PARAMETER LIST LENGTH							
8								
9	CONTROL							

The RESERVE ELEMENT (10) and RELEASE ELEMENT (10) commands provide the basic mechanism for contention resolution in multiple-initiator systems. The third-party reservation allows logical units or elements to be reserved for another specified SCSI device.

If the RESERVE ELEMENT (10) command is implemented, then the RELEASE ELEMENT (10) also shall be implemented. Element reservations are not allowed in attached media changer usage.

NOTE 12— The ELEMENT bit is in the same position as the EXTENT bit in the SPC definition of RESERVE (10). An attached media changer with a primary device that supports extents can not distinguish element from extent reservations.

6.15.1 Third-party reservation (Mandatory)

The third-party reservation option of the RESERVE command allows an application client to reserve a logical unit or elements within a logical unit for another SCSI device.

If the third-party (3RDPTY) bit is zero, the third-party reservation option is not requested. If the 3RDPTY bit is one, the RESERVE command shall reserve the specified unit or elements for the SCSI device specified in the THIRD PARTY DEVICE ID field. The target shall preserve the reservation until it is superseded by another valid RESERVE command from the initiator that made the reservation or until it is released by the same initiator, by a TARGET RESET task management function from any initiator, by a hard reset condition, or by a power on cycle. The target shall ignore any attempt to release the reservation made by any other initiator.

After a third-party reservation has been granted, the initiator that sent the RESERVE command shall be treated like any other initiator. Reservation conflicts shall occur in all cases where another initiator is not allowed access due to the reservation.

6.15.2 Superseding reservations

An initiator that holds a current reservation may modify that reservation by issuing another RESERVE command to the same unit and, if the ELEMENT bit is one, using the same reservation identification. The superseding RESERVE command shall release the previous reservation in place when the new reservation request is granted. The current reservation shall not be modified if the new reservation request cannot be granted. If the superseding reservation cannot be granted because of conflicts with a previous active reservation (other than the reservation being superseded), the target shall return RESERVATION CONFLICT status.

NOTE 13— Superseding reservations are principally intended to allow the SCSI device ID to be changed on a reservation using the third-party reservation option.

The format of THIRD PARTY DEVICE ID is protocol specific. If the THIRD PARTY DEVICE ID value associated with the reservation is smaller than 255, the LONGID bit may be zero and the THIRD PARTY DEVICE ID value sent in the CDB. If the LONGID bit is zero, the PARAMETER LIST LENGTH field shall be set to zero. If the THIRD PARTY DEVICE ID value is greater than 255, the LONGID bit shall be one.

If the LONGID bit is one, the THIRD PARTY DEVICE ID field in the CDB shall be ignored. If the LONGID bit is one, the PARAMETER LIST LENGTH field shall be at least eight. If the LONGID bit is one and the PARAMETER LIST LENGTH field is less than eight, the device server shall return a CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code PARAMETER LIST LENGTH ERROR.

Device servers that support device IDs greater than 255 shall accept commands with LONGID equal to one. Device servers whose devices IDs are limited to 255 or smaller may reject commands with LONGID equal to one with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

If both the LONGID and ELEMENT bits are one, then the parameter list shall have the format shown in table 30 and the extent list length shall be the PARAMETER LIST LENGTH minus eight.

Table 30 — RESERVE ELEMENT (10) ID & elements parameter list

Bit	7	6	5	4	3	2	1	0
Byte								
0 ----- 7	THIRD PARTY DEVICE ID							
8 ----- n	Element Descriptors (see table 23)							

6.16 SEND VOLUME TAG command

The SEND VOLUME TAG command (see table 31) transfers a volume tag template to be used for a search of existing volume tag information or new volume tag information for one media changer element address. The function of the command is conveyed by the SEND ACTION CODE field value. The REQUEST VOLUME ELEMENT ADDRESS command may be used to transfer the results of a translate search operation.

A reservation conflict shall occur if a SEND VOLUME TAG command is received from an initiator other than the one holding a logical unit or element reservation.

Support for this command is optional for independent media changers. This command may have command parameter data. No command response data is returned.

Table 31 — SEND VOLUME TAG command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (B6h)							
1	Reserved				ELEMENT TYPE CODE			
2	ELEMENT ADDRESS							
3								
4	Reserved							
5	Reserved			SEND ACTION CODE				
6	Reserved							
7								
8	PARAMETER LIST LENGTH							
9								
10	Reserved							
11	CONTROL							

The ELEMENT TYPE CODE field specifies an element type specification as defined in the READ ELEMENT STATUS command (see table 14). If the SEND ACTION CODE indicates a translate operation, this field indicates the element types to be searched. If the value is zero, all element types are candidates for a translate operation. If the SEND ACTION CODE does not indicate a translate, this field shall be treated as reserved.

The ELEMENT ADDRESS field gives a media changer element address whose interpretation depends on the SEND ACTION CODE field. When the SEND ACTION CODE is a translate, the element address field gives the starting element to be examined for satisfaction of the search criteria. When the SEND ACTION CODE is assert, replace, or undefine, the ELEMENT ADDRESS field gives the specific element address where volume tag information for a volume is to be modified.

The SEND ACTION CODE field gives the function to be performed by this command as listed in table 32.

Table 32 — Send action codes

Code	Description
0h	Translate - search all defined volume tags
1h	Translate - search only primary volume tags
2h	Translate - search only alternate volume tags
3h	Reserved
4h	Translate - search all defined tags - ignore sequence numbers
5h	Translate - search primary tags - ignore sequence numbers
6h	Translate - search alternate tags - ignore sequence numbers
7h	Reserved
8h	Assert - as the primary volume tag - if tag now undefined
9h	Assert - as the alternate volume tag - if tag now undefined
Ah	Replace - the primary volume tag - current tag ignored
Bh	Replace - the alternate volume tag - current tag ignored
Ch	Undefine - the primary volume tag - current tag ignored
Dh	Undefine - the alternate volume tag - current tag ignored
Eh – 1Bh	Reserved
1Ch – 1Fh	Vendor-specific

Translate operations request that the logical unit search the volume tag information available for volumes at defined element addresses for volume tag information that matches the template given by the command parameter data. The resulting information may be reported via the REQUEST VOLUME ELEMENT ADDRESS command.

Assert operations define volume tag information for a single volume at an element address that does not currently have defined volume tag information. A CHECK CONDITION status with the sense key set to ILLEGAL REQUEST is reported if the volume at the selected element address already has defined volume tag information. In this case, the original volume tag information shall not be changed. Support for this field set to an assert function value is optional.

Replace operations define or overwrite volume tag information for a single volume at one element address. Any previously defined volume tag information is overwritten. Support for this field set to a replace function value is optional.

Undefine operations cause any previously defined volume tag information for the volume at the specified element address to be cleared. It shall not be considered an error to undefine volume tag information that was not previously defined. Support for this field set to an undefine function value is optional.

If a logical unit implements volume tag information, it may choose to not implement the functions that modify volume tag information. For such an implementation a request for any assert, replace or undefine function shall cause the SEND VOLUME TAG command to be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST.

The PARAMETER LIST LENGTH field shall be zero for undefine functions. The volume tag information sent as command parameter data for translate, assert and replace functions is defined in table 33.

Table 33 — Send volume tag parameters format

Bit	7	6	5	4	3	2	1	0
Byte								
0	VOLUME IDENTIFICATION TEMPLATE							
31								
32	Reserved							
33								
34	MINIMUM VOLUME SEQUENCE NUMBER							
35								
36	Reserved							
37								
38	MAXIMUM VOLUME SEQUENCE NUMBER							
39								

The VOLUME IDENTIFICATION TEMPLATE field specifies a search template for translate functions and the exact value of the new volume identification information for other SEND VOLUME TAG command functions.

As a search template, this field may contain the wildcard characters '?' and '*' (3Fh and 2Ah).

- '?' will match any single character;
- '*' will match any string of characters. When it appears in a template the remainder of the template at higher offsets in the field is not used.

For an assert, replace, or undefine function, this field shall not contain the '?' or '*' wildcard characters.

The MINIMUM VOLUME SEQUENCE NUMBER field specifies the new sequence number for the assert and replace functions. For a translate, this field specifies the least value in the volume sequence number field of the volume tag information that will meet the search specification.

The MAXIMUM VOLUME SEQUENCE NUMBER field specifies the maximum value in a volume sequence number field of the volume tag information that meets the search specification. This field is ignored for assert, replace and undefine functions.

6.17 WRITE ATTRIBUTE command.

The WRITE ATTRIBUTE command (see table 34) allows an application client to write attribute values to Medium Auxiliary Memory (MAM).

Table 34 — WRITE ATTRIBUTE command

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (8Dh)							
1	Reserved							
2	ELEMENT ADDRESS							
3								
4	ELEMENT TYPE CODE							
5	VOLUME NUMBER							
6	Reserved							
7	PARTITION NUMBER							
8	Reserved							
9	Reserved							
10	PARAMETER LIST LENGTH							
11								
12								
13								
14	Reserved							
15	CONTROL							

The ELEMENT ADDRESS field specifies the element where the MAM currently resides (as part of a medium). This might mean, for example, a MAM inside a medium residing in a storage element or a MAM inside a medium residing in a data transfer element. Note that this field forms an additional location qualifier hierarchically superior to volume number and partition number.

The ELEMENT TYPE CODE field is defined by table 14.

For the definitions of all other fields, and parameter data format, see SPC-2.

7 Parameters

This clause defines the parameters used for independent media changers devices. Attached media changers shall use the parameters defined for the primary device type.

7.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with independent media changer devices. Attached media changers shall use the descriptors and pages defined for the primary device type.

The diagnostic page codes for independent media changer devices are defined in table 35.

Table 35 — Diagnostic page codes

Page code	Description	Subclause
00h	Supported diagnostic page	SPC
01h – 3Fh	Reserved (for all device type pages)	
40h – 7Fh	Reserved	
80H – FFh	Vendor-specific pages	

7.2 Log parameters

7.2.1 Log page codes for independent media changers.

This subclause defines the descriptors and pages for log parameters used with independent media changer devices. Attached media changers shall use the descriptors and pages defined for the primary device type.

The log page codes for independent media changer devices are defined in table 36.

Table 36 — Log page codes

Page code	Description	Subclause
00h	Supported log pages	SPC
01H – 05h	Reserved	
06h	Non medium error page	SPC
07h	Last <i>n</i> error events page	SPC
08H – 0Ah	Reserved	
0Bh	Last <i>n</i> deferred errors or asynchronous events page	SPC
0Ch	Reserved	
0Dh	Temperature page	SPC
0Eh	Start-stop cycle counter page	SPC
0Fh	Application client page	SPC
10h	Self-test results page	SPC
11H - 2Dh	Reserved	
2Eh	TapeAlert page	7.2.2
2Fh	Reserved	
30H – 3Eh	Vendor-specific pages	

7.2.2 TapeAlert page.

Support for the TapeAlert log page is optional for independent media changers. If supported, the TapeAlert log page shall operate as defined in SSC using the flag definitions in Annex A of this document. Attached media changers operating with an SSC primary device that supports the TapeAlert page shall use the flags as defined in SSC.

EDITORS NOTE: TapeAlert log page description should be moved here and renamed to avoid the reference to SSC.

7.3 Mode parameters

This subclause defines the descriptors and pages for mode parameters used with independent media changer devices. Attached media changers shall only return pages and descriptors defined for the primary device type.

The mode parameter list, including the mode parameter header and mode block descriptor, are defined in SPC.

The MEDIUM TYPE code field is contained in the mode parameter header. This field is reserved for independent media changer devices.

The DEVICE-SPECIFIC PARAMETER field is contained in the mode parameter header. This field is reserved for independent media changer devices.

The DENSITY CODE field is contained in the mode parameter block descriptor. This field is reserved for independent media changer devices.

The mode page codes for independent media changer devices are shown in table 37.

Table 37 — Mode page codes

Page code	Description	Subclause
00h	Vendor-specific (does not require page format)	
01h	Reserved	
02h	Disconnect Reconnect page	SPC
03h - 09h	Reserved	
0Ah	Control Mode page	SPC
0Bh - 17h	Reserved	
18h	Protocol specific LUN page	SPC
19h	Protocol specific port page	SPC
1Ah	Power condition page	SPC
1Bh	Reserved	
1Ch	Informational exceptions control page	SPC
1Dh	Element address assignment page	7.3.2
1Eh	Transport geometry parameters page	7.3.3
1Fh	Device capabilities page	7.3.1
20H – 3Eh	Vendor-specific (page format required)	
3Fh	Return all pages (valid only for the MODE SENSE command)	SPC

7.3.1 Device capabilities mode page

The device capabilities mode page (see table 38) defines characteristics of the element types of an independent media changer. Attached media changers shall not return this page. This information may be employed by the initiator to determine functions permitted by the MOVE MEDIUM and EXCHANGE MEDIUM commands.

Table 38 — Device capabilities page

Bit	7	6	5	4	3	2	1	0
Byte								
0	PS	RSVD	PAGE CODE (1Fh)					
1	PARAMETER LENGTH (12h)							
2	Reserved				STORDT	STORI/E	STORST	STORMT
3	Reserved							
4	Reserved				MT->DT	MT->I/E	MT->ST	MT->MT
5	Reserved				ST->DT	ST->I/E	ST->ST	ST->MT
6	Reserved				I/E->DT	I/E->I/E	I/E->ST	I/E->MT
7	Reserved				DT->DT	DT->I/E	DT->ST	DT->MT
8	Reserved							
11								
12	Reserved				MT<>DT	MT<>I/E	MT<>ST	MT<>MT
13	Reserved				ST<>DT	ST<>I/E	ST<>ST	ST<>MT
14	Reserved				I/E<>DT	I/E<>I/E	I/E<>ST	I/E<>MT
15	Reserved				DT<>DT	DT<>I/E	DT<>ST	DT<>MT
16	Reserved							
19								

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a nonvolatile, vendor-specific location.

The field names in table 38 use the following element type abbreviations:

- MT — a medium transport element,
- ST — a storage element,
- I/E — an import/export element, and
- DT — a data transfer element.

In the descriptions, XX and YY are any of the element type abbreviations.

A STORXX bit value of one indicates that the defined elements of type XX may provide independent storage for a unit of media. A value of zero indicates that elements of type XX provide virtual sources or destinations, that the location of the unit of media is provided by an element of some other type. The value of STORST is one by the definition of that type (see 5.5).

An XX->YY bit value of one indicates that the media changer device supports all MOVE MEDIUM commands where the source is element type XX, the destination is element type YY and these element addresses are otherwise valid. An XX->YY bit value of zero indicates that these MOVE MEDIUM commands may or may not be valid depending on the particular elements requested. Those which are not valid will be rejected with ILLEGAL REQUEST.

An XX<>YY bit value of one indicates that the media changer device supports all EXCHANGE MEDIUM commands where the source is element type XX, FIRST DESTINATION ADDRESS is element type YY, SECOND DESTINATION ADDRESS is the same type as the source element type and these element addresses are otherwise valid. An XX<>YY bit value of zero indicates that these EXCHANGE MEDIUM commands may or may not be valid depending on the particular elements requested. Those which are not valid will be rejected with ILLEGAL REQUEST.

7.3.2 Element address assignment mode page

The element address assignment mode page (see table 39) is used to assign addresses to the elements of the independent media changer (MODE SELECT) and to report those assignments (MODE SENSE). This page also defines the number of each type of element present. An attached media changer shall not return this page.

Table 39 — Element address assignment page

Bit Byte	7	6	5	4	3	2	1	0
0	PS	RSVD	PAGE CODE (1Dh)					
1	PARAMETER LIST LENGTH							
2	FIRST MEDIUM TRANSPORT ELEMENT ADDRESS							
3								
4	NUMBER OF MEDIUM TRANSPORT ELEMENTS							
5								
6	FIRST STORAGE ELEMENT ADDRESS							
7								
8	NUMBER OF STORAGE ELEMENTS							
9								
10	FIRST IMPORT/EXPORT ELEMENT ADDRESS							
11								
12	NUMBER OF IMPORT/EXPORT ELEMENTS							
13								
14	FIRST DATA TRANSFER ELEMENT ADDRESS							
15								
16	NUMBER OF DATA TRANSFER ELEMENTS							
17								
18	Reserved							
19								

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a nonvolatile vendor-specific location.

The FIRST MEDIUM TRANSPORT ELEMENT ADDRESS field identifies the first medium transport element contained in the media changer (other than the default medium transport address of zero). The NUMBER OF MEDIUM TRANSPORT ELEMENTS field defines the total number of medium transport elements contained in the media changer. If the NUMBER OF MEDIUM TRANSPORT ELEMENTS field in a MODE SELECT command is greater than the default value returned in the MODE SENSE parameter data, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code PARAMETER VALUE INVALID.

The FIRST STORAGE ELEMENT ADDRESS field identifies the first medium storage element contained in the media changer. The NUMBER OF STORAGE ELEMENTS field defines the total number of medium storage elements contained in the media changer. If the NUMBER OF MEDIUM STORAGE ELEMENTS field in a MODE SELECT command is greater than the default value returned in the MODE SENSE parameter data, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code PARAMETER VALUE INVALID.

The FIRST IMPORT/EXPORT ELEMENT ADDRESS field identifies the first medium portal that is accessible both by the medium transport devices and also by an operator from outside the media changer. The NUMBER OF IMPORT/EXPORT ELEMENTS field defines the total number of import/export elements contained in the media changer and accessible to the medium transport elements. If the NUMBER OF IMPORT/EXPORT ELEMENTS field in a MODE SELECT command is greater than the default value returned in the MODE SENSE parameter data, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code PARAMETER VALUE INVALID.

The FIRST DATA TRANSFER ELEMENT ADDRESS field identifies the first data transfer element contained in the media changer. The data transfer elements may be either read/write or read-only devices. The NUMBER OF DATA TRANSFER ELEMENTS field defines the total number of data transfer elements contained within the media changer and accessible to the medium transport elements. If the NUMBER OF DATA TRANSFER ELEMENTS field in a MODE SELECT command is greater than the default value returned in the MODE SENSE parameter data, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code PARAMETER VALUE INVALID.

NOTE 14 — The number of import/export elements or data transfer elements may be zero. The number of storage elements may only be zero when there is at least one import/export element with independent storage capability (see 5.5).

Each element in the media changer must have a unique address. If the address ranges defined for any of the element types overlap, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.

7.3.3 Transport geometry parameters mode page

The transport geometry parameters mode page (see table 40) defines whether each medium transport element of an independent media changer is a member of a set of elements that share a common robotics subsystem and whether the element is capable of media rotation. One transport geometry descriptor is transferred for each medium transport element, beginning with the first medium transport element. (Other than the default transport element address of zero.) An attached media changer shall not return this page.

Table 40 — Transport geometry parameters page

Bit Byte	7	6	5	4	3	2	1	0
0	PS	RSVD	PAGE CODE (1Eh)					
1	PARAMETER LENGTH (n-1)							
2	Transport geometry descriptor(s)							
n								

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a nonvolatile vendor-specific location.

The PARAMETER LENGTH specifies the number of bytes of transport geometry descriptors that follow. The geometry of each medium transport element is defined using a two-byte field as defined by table 41.

Table 41 — Transport geometry descriptor

Bit Byte	7	6	5	4	3	2	1	0
0	Reserved							ROTATE
1	MEMBER NUMBER IN TRANSPORT ELEMENT SET							

A ROTATE bit of one indicates that the medium transport element supports media rotation for handling double-sided media. A ROTATE bit of zero indicates that the medium transport element does not support media rotation.

The MEMBER NUMBER IN TRANSPORT ELEMENT SET field indicates the position of this element in a set of medium transport elements that share a common robotics subsystem. The first element in a set has a MEMBER NUMBER IN TRANSPORT ELEMENT SET of zero.

NOTE 15 — This mode page reports information about the way transport elements are physically clustered in a system. The model for this is a media changer device with more than one independent robotics subsystem, where each of these supports multiple transport elements. The elements that are supported by a particular robotics subsystem form a set. This sort of information is helpful for optimization and error recovery in such a large system. (The individual transport element is addressed [not the robotics subsystem]. An element is defined to be a place where a unit of media may be at any point in time. See clause 5.)

Annex A
(normative)
TapeAlert Flags for independent media changers

Code	Flag	Type	Flag Type	Recommended application client message	Probable cause
01h	Library Hardware A	O	C	The library mechanism is having difficulty communicating with the drive: 1. Turn the library off then on. 2. Restart the operation. 3. If the problem persists, call the library supplier help line.	Changer mechanism is having trouble communicating with the internal drive
02h	Library Hardware B	M	W	There is a problem with the library mechanism. If problem persists, call the library supplier help line.	Changer mechanism has a hardware fault
03h	Library Hardware C	O	C	The library has a hardware fault: 1. Reset the library. 2. Restart the operation. Check the library users manual for device specific instructions on resetting the device.	The changer mechanism has a hardware fault that requires a reset to recover
04h	Library Hardware D	M	C	The library has a hardware fault: 1. Turn the library off then on again. 2. Restart the operation. 3. If the problem persists, call the library supplier help line. Check the library users manual for device specific instructions on turning the device power on and off.	The changer mechanism has a hardware fault that is not mechanically related or requires a power cycle to recover
05h	Library Diagnostics Required	O	W	The library mechanism may have a hardware fault. Run extended diagnostics to verify and diagnose the problem. Check the library users manual for device specific instructions on running extended diagnostic tests.	The changer mechanism may have a hardware fault which would be identified by extended diagnostics .
06h	Library Interface	O	C	The library has a problem with the host interface: 1. Check the cables and connections. 2. Restart the operation.	The library has identified an interface fault

07h	Predictive Failure	O	W	A hardware failure of the library is predicted. Call the library supplier help line.	Predictive failure of library hardware
08h	Library Maintenance	O	W	Preventive maintenance of the library is required. Check the library users manual for device specific preventative maintenance tasks, or call your library supplier help line.	Library preventative maintenance required
09h	Library Humidity Limits	O	C	General environmental conditions inside the library are outside the specified humidity range.	Library humidity limits exceeded
0Ah	Library Temperature Limits	O	C	General environmental conditions inside the library are outside the specified temperature range.	Library temperature limits exceeded
0Bh	Library Voltage Limits	O	C	The voltage supply to the library is outside the specified range. There is a potential problem with the power supply or failure of a redundant power supply.	Library voltage limits exceeded
0Ch	Library Stray Tape	O	C	A cartridge has been left inside the library by a previous hardware fault: 1. Insert an empty magazine to clear the fault. 2. If the fault does not clear, turn the library off and then on again. 3. If the problem persists, call the library supplier help line.	Stray cartridge left in library after previous error recovery
0Dh	Library Pick Retry	M	W	There is a potential problem with the drive ejecting cartridges or with the library mechanism picking a cartridge from a slot. 1. No action needs to be taken at this time. 2. If the problem persists, call the library supplier help line.	Operation to pick a cartridge from a slot had to perform an excessive number of retries before succeeding
0Eh	Library Place Retry	M	W	There is a potential problem with the library mechanism placing a cartridge into a slot. 1. No action needs to be taken at this time. 2. If the problem persists, call the library supplier help line.	Operation to place a cartridge in a slot had to perform an excessive number of retries before succeeding

0Fh	Library Load Retry	M	W	There is a potential problem with the drive or the library mechanism loading cartridges, or an incompatible cartridge.	Operation to load a cartridge in a drive had to perform an excessive number of retries before succeeding
10h	Library Door	M	C	The library has failed because the door is open: 1. Clear any obstructions from the library door. 2. Close the library door. 3. If the problem persists, call the library supplier help line.	Changer door open prevents library functioning
11h	Library Mailslot	O	C	There is a mechanical problem with the library media import/export mailslot.	Mechanical problem with import/export mailslot
12h	Library Magazine	O	C	The library can not operate without the magazine. 1. Insert the magazine into the library. 2. Restart the operation.	Library magazine not present
13h	Library Security	O	W	Library security has been compromised.	Library door opened then closed during operation
14h	Library Security Mode	O	I	The library security mode has been changed. The library has either been put into secure mode, or the library has exited the secure mode. This is for information purposes only. No action is required.	Library security mode changed
15h	Library Offline	O	I	The library has been manually turned offline and is unavailable for use.	Library manually turned offline
16h	Library Drive Offline	O	I	A drive inside the library has been taken offline. This is for information purposes only. No action is required.	Library turned internal drive offline.

17h	Library Scan Retry	M	W	There is a potential problem with the bar code label or the scanner hardware in the library mechanism. 1. No action needs to be taken at this time. 2. If the problem persists, call the library supplier help line.	Operation to scan the bar code on a cartridge had to perform and excessive number of retries before succeeding
18h	Library Inventory	O	C	The library has detected an inconsistency in its inventory. 1. Redo the library inventory to correct inconsistency. 2. Restart the operation. Check the applications users manual or the hardware users manual for specific instructions on redoing the library inventory.	Inconsistent media inventory
19h	Library Illegal Operation	O	W	A library operation has been attempted that is invalid at this time.	Illegal operation detected
1Ah	Dual-Port Interface Error	O	W	A redundant interface port on the library has failed.	Failure of one interface port in a dual-port configuration
1Bh	Cooling Fan Failure	O	W	A library cooling fan has failed.	One or more fans inside the library have failed. Internal flag state only cleared when all flags are working again
1Ch	Power Supply	O	W	A redundant power supply has failed inside the the library. Check the library users manual for instructions on replacing the failed power supply.	Redundant power supply failure inside the library subsystem
1Dh	Power Consumption	O	W	The library power consumption is outside the specified range.	Power consumption of one or more devices inside the library is outside the specified range

1Eh	Pass-through mechanism failure	O	C	A failure has occurred in the cartridge pass-through mechanism between two library modules.	Error occurred in pass-through mechanism during self test or while attempting to transfer a cartridge between library modules
1Fh	Cartridge in pass-through mechanism	O	C	A cartridge has been left in the pass-through mechanism from a previous hardware fault. Check the library users guide for instructions on clearing this fault.	Cartridge left in the pass-through mechanism between two library modules
20h	Unreadable bar code labels	O	I	The library was unable to read the bar code on a cartridge.	Unable to read a bar code label on a cartridge during library inventory / scan
Type Key: M - Mandatory. O - Optional. Flag Type Key: C - Critical. W - Warning. I - Information.					

Annex B
(informative)
Bibliography

ANSI X3.304-1996, Information technology – SCSI-3 multi-media commands
ANSI NCITS 306-199X, Information technology – SCSI-3 block commands
ANSI NCITS T10/997D, Information technology – SCSI-3 stream commands
ANSI NCITS T10/1144D, Information technology – SCSI Fibre Channel Protocol- 2
ANSI NCITS T10/1157D, Information technology – SCSI Architecture model - 2
ANSI NCITS T10/1236D, Information technology – SCSI Primary Commands- 2